ORDER NO. CAD90110347A5
H9

Service Manual

Microwave Oven

NN-9500P

Please use this manual together with the service manual for Model No. NN-9500 etc, ORDER NO. CAD90070303C1. +S057

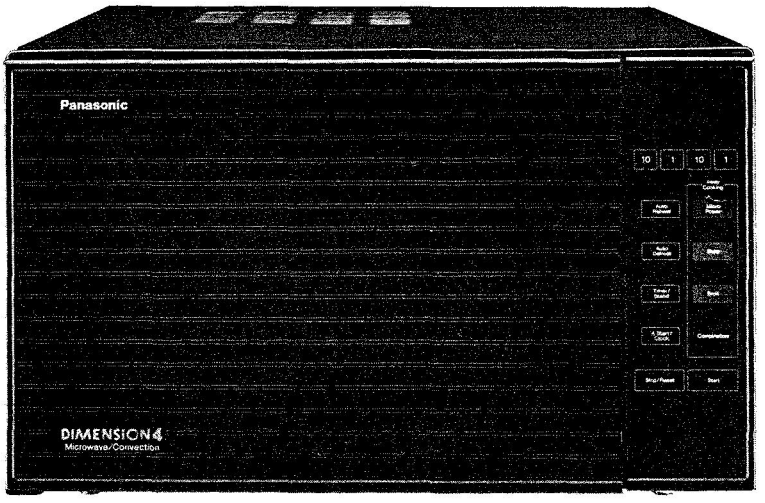

This oven is equipped with automatic conversion system for both 50Hz and 60Hz power supply frequencies with a standard 115-120 volt supply.
No specific adjustment is necessary for conversion of the power supply frequency.

Specifications

Power Source :	120 V AC Single Phase 50/60 Hz
Power Requirement :	Microwave : 1,400 W (12.2 A) Heater : 1,500 W (12.5 A)
Output :	Microwave : 700 W (Full Power) Heater : 1,400 W
Oscillation Frequency :	2,450 MHz
Timer :	99 min. 99 sec. / 9 hr. 99 min.
Outside Dimensions :	23-7/8" (W) × 18-7/8" (D) × 14-13/16" (H) 606 mm (W) × 481 mm (D) × 376 mm (H)
Oven Cavity Dimensions :	16-1/4" (W) × 16-13/16" (D) × 9-1/2" (H) 412 mm (W) × 426 mm (D) × 242 mm (H)
Weight :	64 lbs (29.1 kg)
Specifications subject to change without notice.	

Matsushita Services Company
Division of Matsushita Electric
Corporation of America
50 Meadowland Parkway,
Secaucus, New Jersey 07094

Panasonic Sales Company,
Division of Matsushita Electric
of Puerto Rico, Inc.
San Gabriel Industrial Park
65th Infantry Ave. Km.9.5
Carolina, P.R. 00630

Panasonic Tokyo Sales Department
Matsushita Electric Industrial Co., Ltd.
World Trade Center Bldg., No. 4-1, Hamamatsu-cho
2-Chome, Minato-ku, Tokyo 105, Japan

Panasonic®

SCHEMATIC DIAGRAM

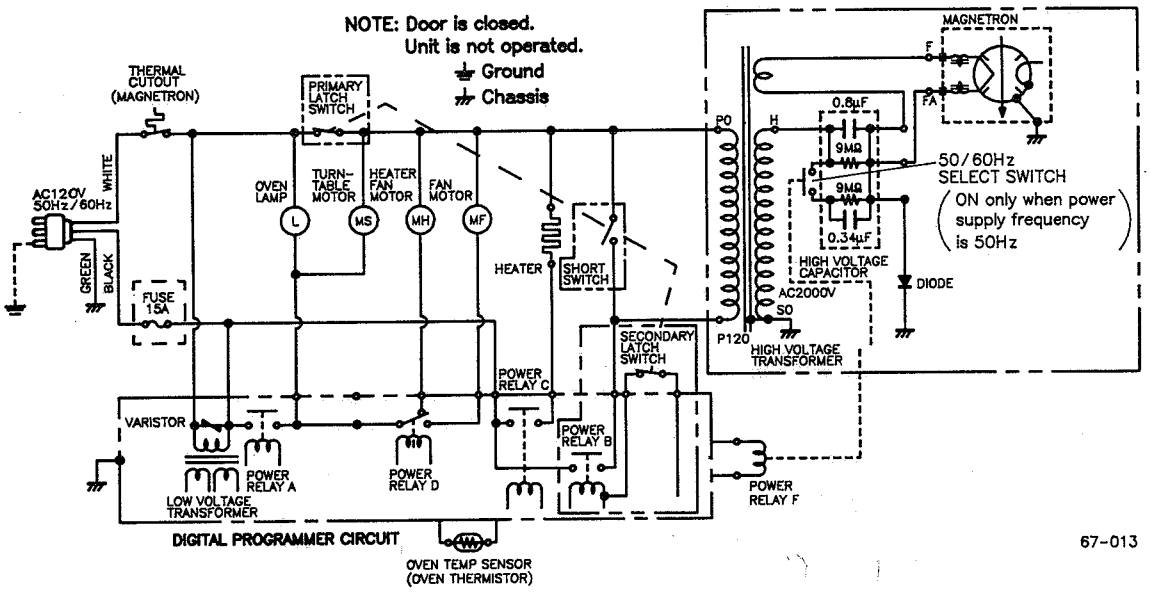

IMPORTANT SAFETY NOTE! THE SHADED AREA ON THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM MICROWAVE RADIATION, FIRE AND ELECTRICAL SHOCK HAZARDS.
WHEN SERVICING, IT IS ESSENTIAL THAT ONLY MANUFACTURER'S SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SHADED AREAS OF THE SCHEMATIC DIAGRAM.

(S-583 PPH)

WIRING DIAGRAM

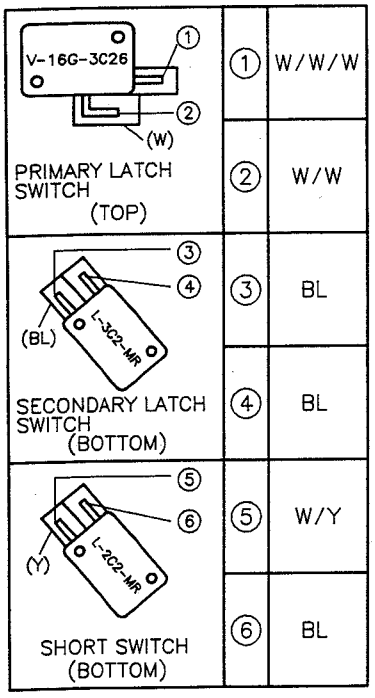

①	W/W/W
②	W/W
③	BL
④	BL
⑤	W/Y
⑥	BL

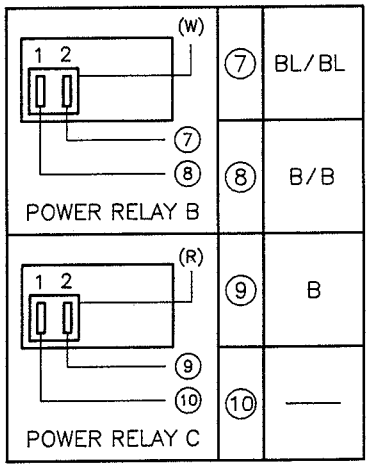

⑦	BL/BL
⑧	B/B
⑨	B
⑩	—

NOTE: *When replacing, check the lead wire colour as shown.
*Colours shown by ( ) indicate colours of lead wire connector housing.

SYMBOL	COLOUR
OR	ORANGE
BL	BLUE
BR	BROWN
W	WHITE
Y	YELLOW
R	RED
GR	GRAY
B	BLACK

57-030

PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

(A) Do not operate or allow the oven to be operated with the door open.

(B) Make the following safety checks on all ovens to be serviced before activating the magnetron or other microwave source, and make repairs as necessary:
   (1) Interlock operation
   (2) Proper door closing
   (3) Seal and sealing surfaces (arcing, wear, and other damage)
   (4) Damage to or loosening of hinges and latches.
   (5) Evidence of dropping or abuse

(C) Before turning on microwave power for any service test or inspection within the microwave generating compartments, check the magnetron, wave guide or transmission line, and cavity for proper alignment, integrity and connections.

(D) Any defective or misadjusted components in the interlock, monitor, door seal, and microwave generation and transmission systems shall be repaired, replaced, or adjusted by procedures described in this manual before the oven is released to the owner.

(E) A microwave leakage check to verify compliance with the Federal Performance Standard should be performed on each oven prior to release to the owner.

EXPLODED VIEW AND PARTS LIST

This list shows only the unique parts from model NN-9500.
Please use these part numbers for parts orders.

IMPORTANT SAFETY NOTICE:

Components identified ⚠ mark have special characteristics important for safety.
When replacing any of these components, use only manufacture's specified parts.

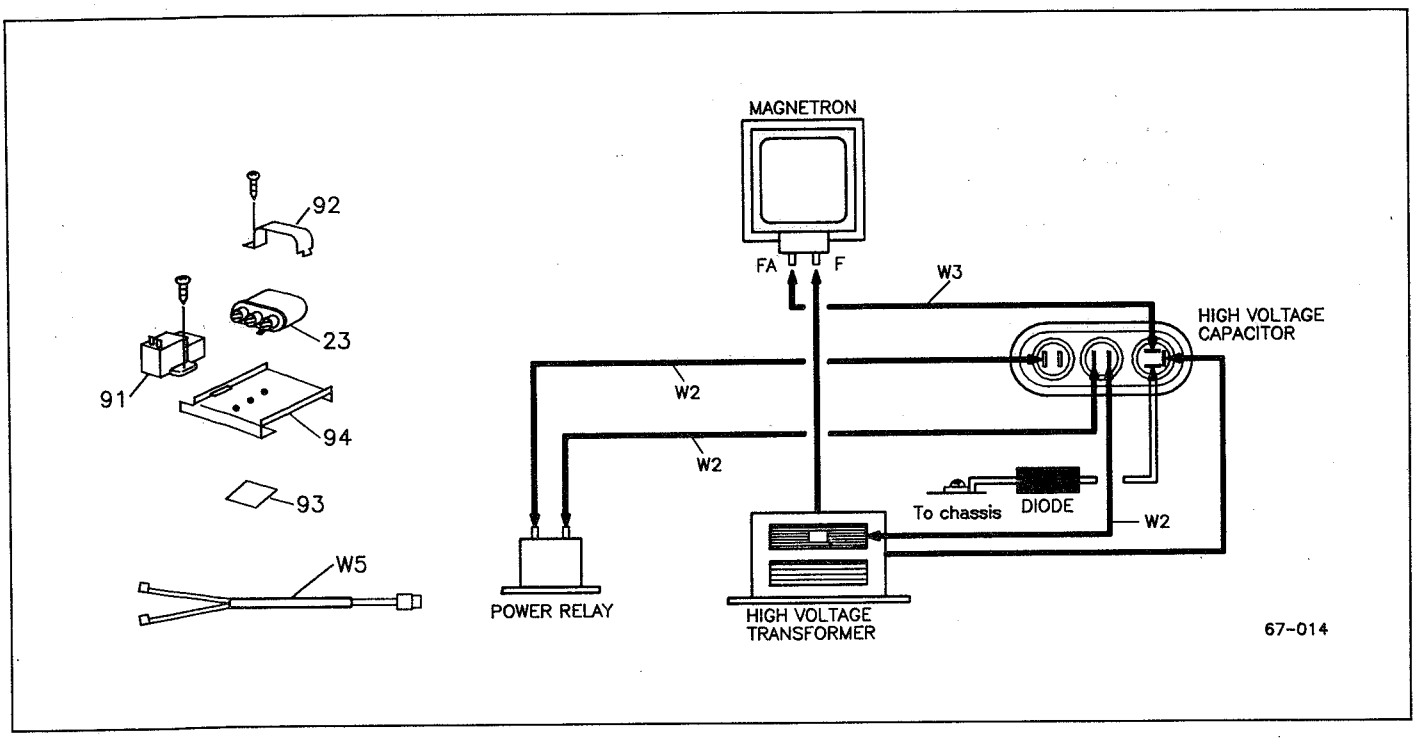

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
3		A10095450PP	Cabinet body	1	
13		A400A4060PP	Fan motor	1	(NOTE)
22	⚠	A600B5040PP	H.V. Transformer	1	(NOTE)
23		A60904650PP	H.V. Capacitor	1	(NOTE)
28		A61524210AP	Oven lamp socket	1	
33		A41445040PP	Orifice	1	
40		ANE000Z000AA	Cushion rubber C	1	Addition
69		A61884060AP	Capacitor bracket	0	Deletion
73		A41795450PP	Heater fan motor assy	1	(NOTE)
80		ANE000Z00CAB	Cushion rubber C	2	Deletion
91		A691X5040PP	Power relay	1	Addition (NOTE)
92		ANE6037X00PP	Capacitor bracket	1	Addition
93		A61705040PP	Insulation sheet C	1	Addition
94		A62485040PP	Capacitor bracket B	1	Addition
95		A60705540PP	Insulation sheet A	1	For Cabinet body
E2		A01575830PP	Name plate	1	
E3		A603L5830PP	D.P. Circuit assy	1	
P1		A01175460CP	Packing B	1	Addition
P2		A00035830PP	Instruction book	1	
P3		ANE02072L0AP	Styrol sheet	1	Addition
P5		A01065830PP	Packing case, paper	1	
P11		A06034250AP	Broiler pan	1	Addition
P13		A06484250AP	Spatter shield	1	Addition
P14		A01085460CP	Tray packing	1	Addition
P17		ANE0145110AG	Door sheet B	1	
W1		A030A5830PP	Lead wire harness	1	
W2		A03505040PP	Lead wire	3	
W3		A03515040PP	Lead wire	1	
W5		A03545040PP	Lead wire	1	

NOTE : This part can be used for 50 Hz and 60 Hz areas.

DIGITAL PROGRAMMER CIRCUIT PARTS LIST

Ref. No.	Part No.	Description	Pcs/ Set	Remarks
DISP	A64565820AP	Fluorescent tube	1	
SPACER	A82845540AP	Spacer cushion	1	For DISP
T1	A62495450PP	L.V.Transformer	1	(4.5VA)
CN1	AEEMMA15509W	9 pin connector	1	
CN2	AEEMMC00F04R	4 pin connector	1	
CN3	AEEMMC00F04W	4 pin connector	1	
CN4	AEEM11FDZBTM	11 pin connector	1	
BZ	AEFB22EP2002	Buzzer	1	2kHz
CX1	AEFFT4R19GWT	Ceramic resonator	1	4.19MHz
RY1	AEAWJZDC18A	Power relay	1	(18V)
RY2,4	AEG5J1EG12B	Power relay	2	(12V)
RY5	AEBVG-18P-0	Power relay	1	(18V)
ZNR1	ERZC10DK471F	ZNR	1	
IC1	AEIC50940293	L.S.I. (MOS Microprocessor IC)	1	
IC2	AN6752	I.C. (Bipolar Linear IC)	1	
IC3	AEICBA12004	I.C.	1	
Q1	2SD2006-R	Transistor, Si 250mW	1	(120MHz)
Q5	UN4123	Transistor, Si 300mW	1	
Q6	2SC1318-R	Transistor, Si 400mW	1	(200MHz)
D1,2	AEDNERA1502	Diode, Si	2	(0.1A)
D3,4,6,7,8,9	MA196	Diode, Si	6	(0.1A)
ZD1	AEDZ5R6ES2T1	Zener diode, Si	1	
ZD2	AEDZ4R7ES3T1	Zener diode, Si	1	
ZD5	AEDZ15ES3T1	Zener diode, Si	1	
C1	ECEA1VU102E	Electrolytic capacitor, Al	1	1000 μF, −10%+30%, 35V
C2	ECEA1VU221B	Electrolytic capacitor, Al	1	220μF, −10%+30%, 35V
C3	ECEA1CU220B	Electrolytic capacitor, Al	1	22μF, −10%+30%, 16V
C8	ECKR1H103ZF	Ceramic capacitor (Single layer)	1	0.01μF, −20%+80%, 50V
C9,10,11, 12,14	ECBT1E103ZF5	Ceramic capacitor (Single layer)	5	0.01μF, −20%+80%, 25V
C13	ECEA1HU4R7B	Electrolytic capacitor, Al (Multi layer)	1	4.7μF, −10%+30%, 50V
R1,2	ERDS2TJ201T	Carbon film resistor	2	200Ω, ±5%, 1/4W
R3,19,20, 24,41,43	ERDS2TJ103T	Carbon film resistor	6	10kΩ, ±5%, 1/4W
R4,5,23, 28,29,30, 31	ERDS2TJ751T	Carbon film resistor	7	750Ω, ±5%, 1/4W
R18	ERDS2TJ914T	Carbon film resistor	1	910kΩ, ±5%, 1/4W
R22,27	ERDS2TJ512T	Carbon film resistor	2	5.1kΩ, ±5%, 1/4W
R25	ERDS2TJ105T	Carbon film resistor	1	1MΩ, ±5%, 1/4W
R26	ERDS2TJ153T	Carbon film resistor	1	15kΩ, ±5%, 1/4W
R34,35	ERDS2TJ300T	Carbon film resistor	2	30Ω, ±5%, 1/4W
R38,39	ERDS2TJ390T	Carbon film resistor	2	39Ω, ±5%, 1/4W
R46	ERDS2TJ181T	Carbon film resistor	1	180Ω, ±5%, 1/4W
R47	ERDS2TJ330T	Carbon film resistor	1	33Ω, ±5%, 1/4W
R48,51	ERDS2TJ1R1T	Carbon film resistor	2	1.1Ω, ±5%, 1/4W
R50	ERDS2TJ910T	Carbon film resistor	1	91Ω, ±5%, 1/4W
Z1	AEXBM4X153JT	Compound resistor	1	15kΩX4, ±5%, 1/8W

SERVICE FIXTURES AND TOOLS

EXTENSION CABLES

NOTE: To be used when repairing the DPC board assembly directly on the oven for easy access of the board.

Ref. No.	Part No.	Description	Pcs/ Set	Remarks
	AT40M004	4 pin extension cable	2	Cable No.16
	AT40M009	9 pin extension cable	1	Cable No.33
	AT40E006	1 pinX6 extension cable	1	Cable No.9

DPC COMMON CHECKER AND ITS CABLE

NOTE: To be used only when DPC common checker is available.

Ref. No.	Part No.	Description	Pcs/ Set	Remarks
	ANE600ZK70AP	DPC common checker	1	
	AT30A5450AP	DPC checker cable	1	NOTE

DIGITAL PROGRAMMER CIRCUIT

SCHEMATIC DIAGRAM

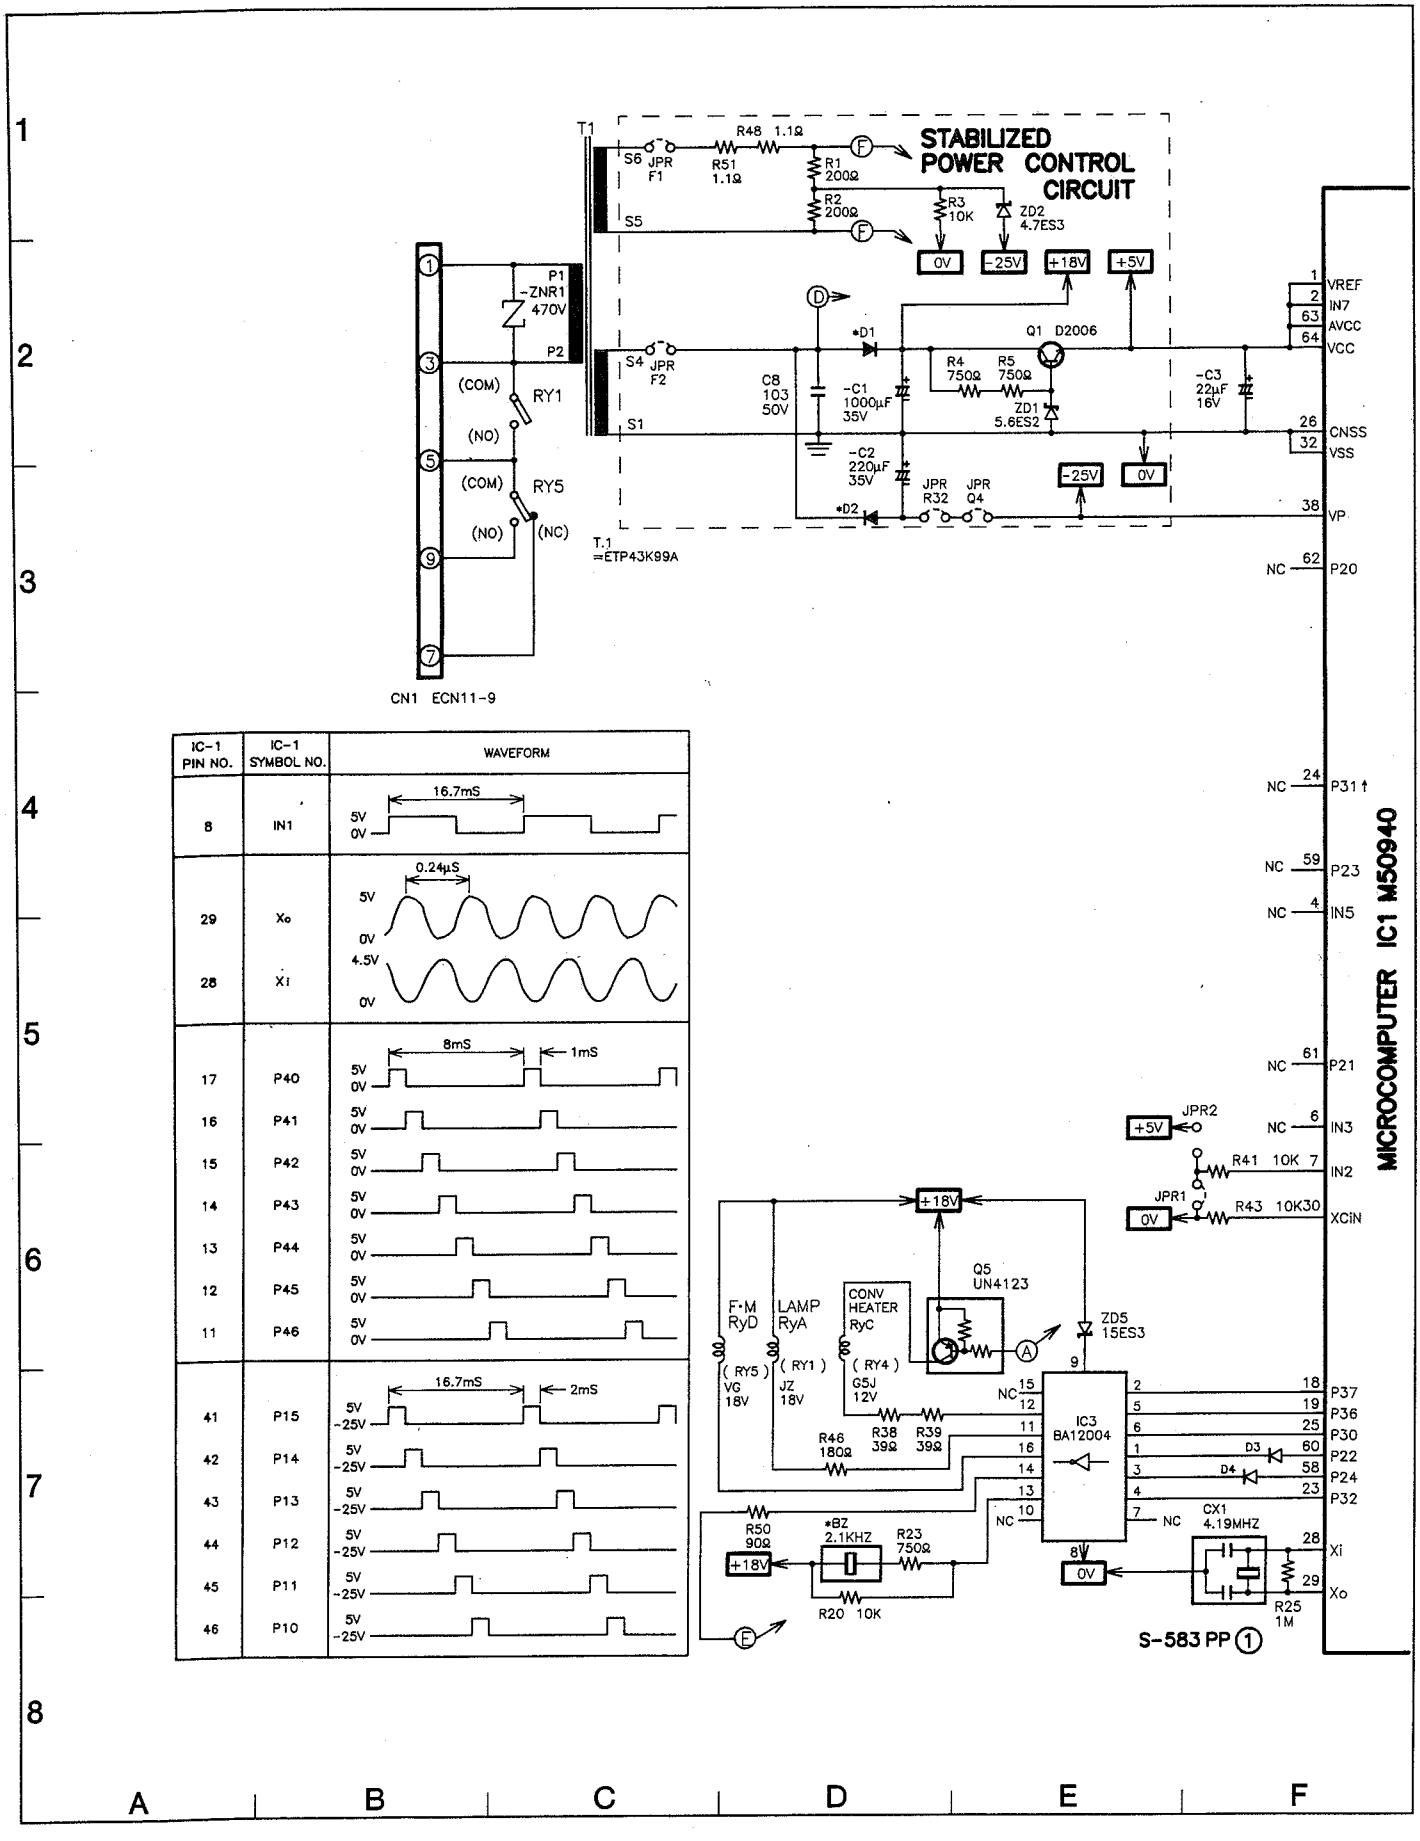

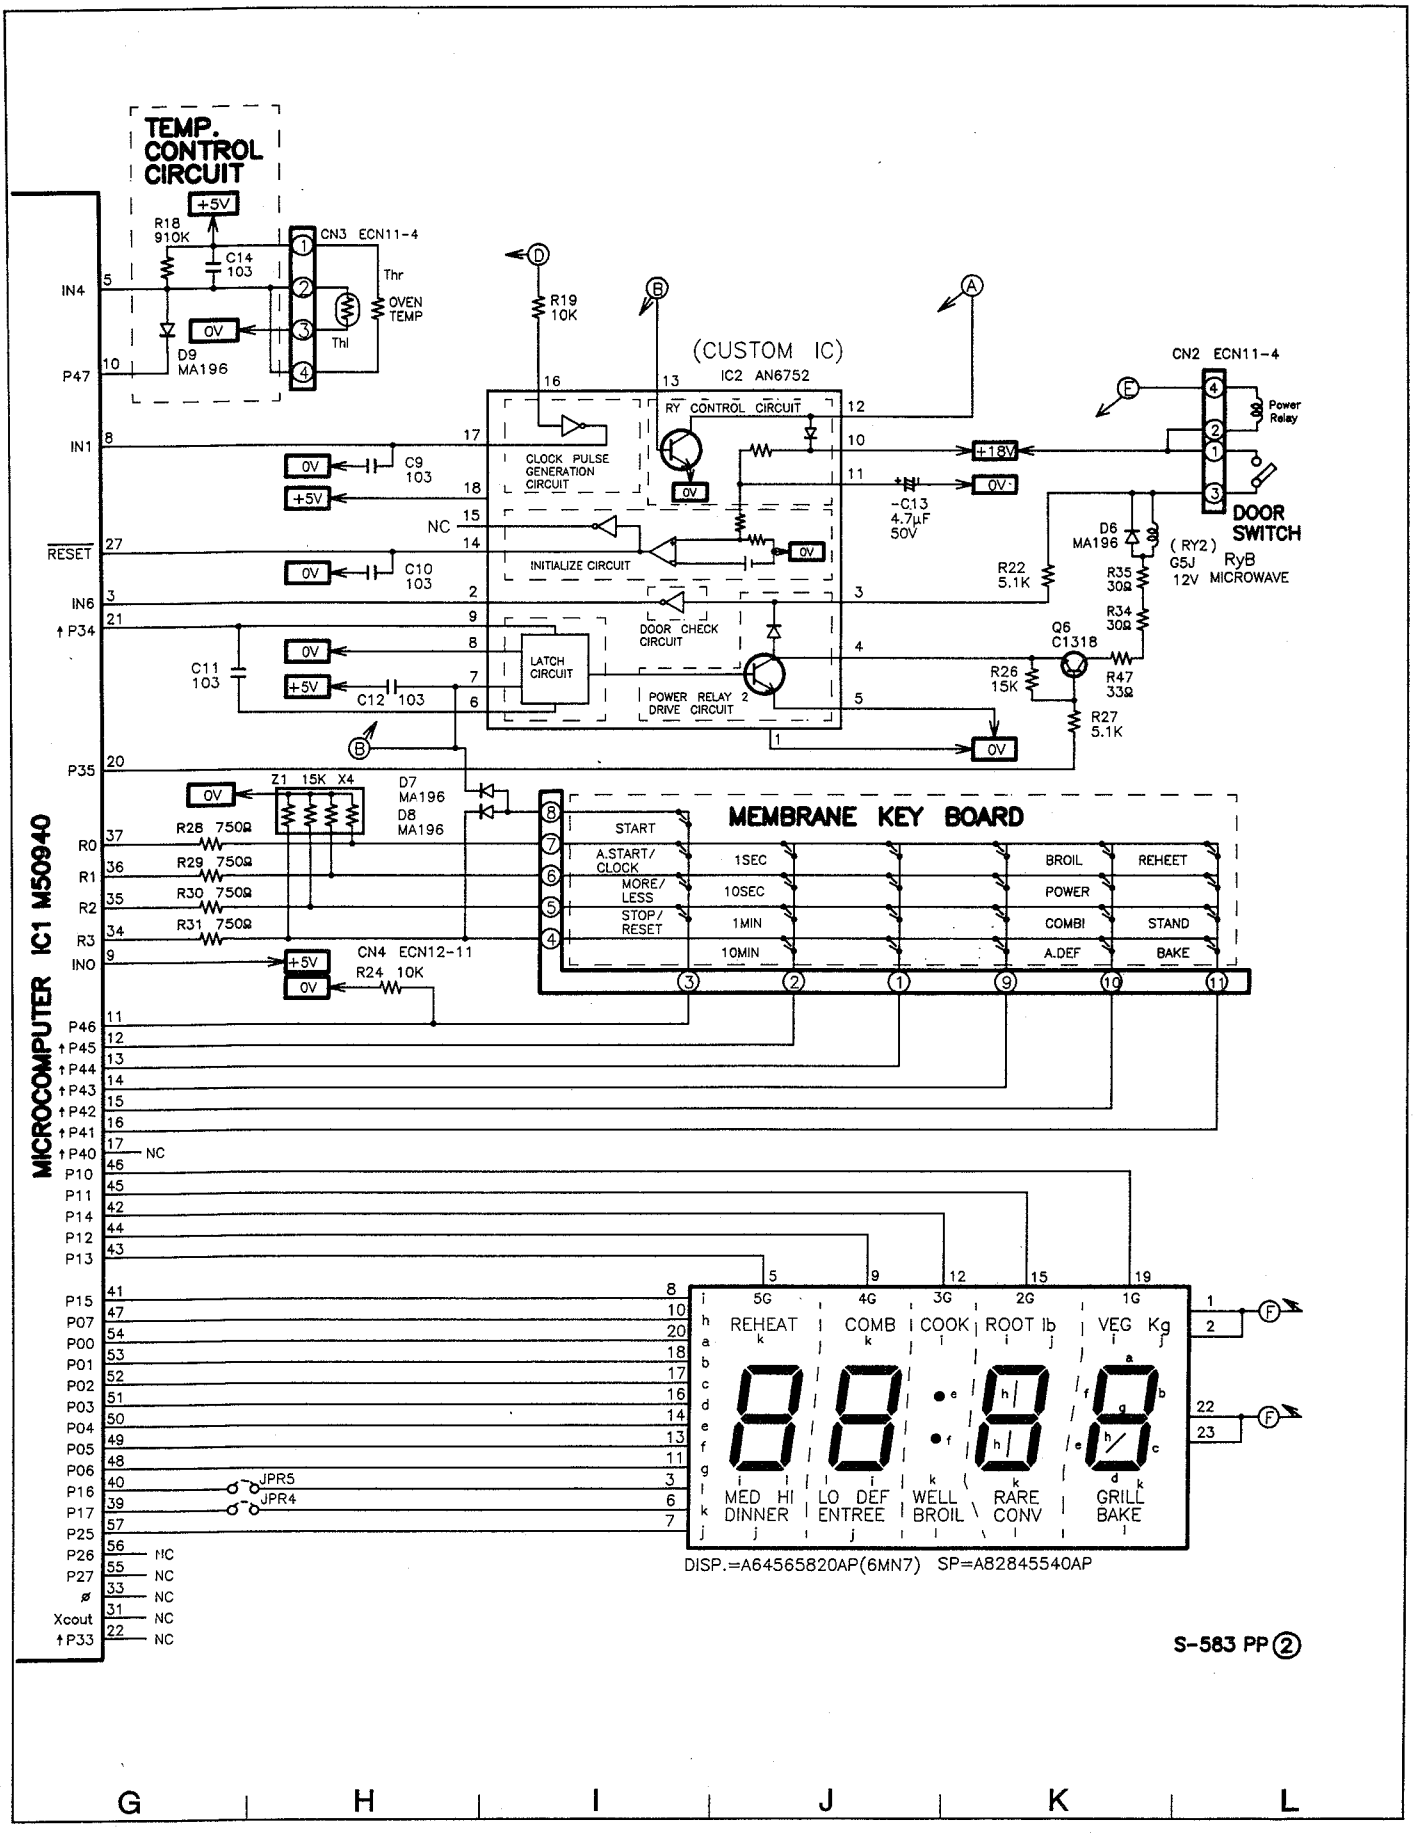
TEMP. CONTROL CIRCUIT
MICROCOMPUTER IC1 M50940
(CUSTOM IC)
IC2 AN6752
CLOCK PULSE GENERATION CIRCUIT
INITIALIZE CIRCUIT
LATCH CIRCUIT
RY CONTROL CIRCUIT
DOOR CHECK CIRCUIT
POWER RELAY 2 DRIVE CIRCUIT
MEMBRANE KEY BOARD
START
A.START/ CLOCK
MORE/ LESS
STOP/ RESET
1SEC
10SEC
1MIN
10MIN
BROIL
REHEET
POWER
COMBI
STAND
A.DEF
BAKE
DOOR SWITCH
Power Relay
OVEN TEMP
Thr
Thl
REHEAT
COMB
COOK
ROOT lb
VEG Kg
MED HI DINNER
LO DEF ENTREE
WELL BROIL
RARE CONV
GRILL BAKE
DISP.=A64565820AP(6MN7) SP=A82845540AP
S-583 PP ②

S-583 PPH
Printed in Japan
Ⓕ & Ⓔ

ORDER NO. CAD90070303C1
E1

505

Service Manual

Microwave Oven

MODEL	U.S.A.	CANADA
	APH	CPH
NN-9500	○	—
NN-9800	—	○
NN-9850	○	○

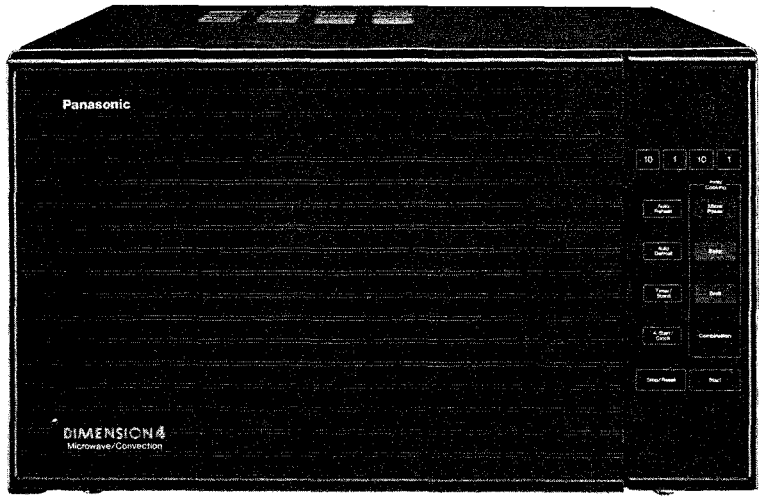

Specifications

Power Source :	120 V AC Single Phase 60 Hz
Power Requirement :	Microwave : 1,400 W (12.2 A) Heater : 1,500 W (12.5 A)
Output :	Microwave : 700 W (Full Power) Heater : 1,400 W
Oscillation Frequency :	2,450 MHz
Timer :	99 min. 99 sec. / 9 hr. 99 min.
Outside Dimensions :	23-7/8" (W) × 18-7/8" (D) × 14-13/16" (H) 606 mm (W) × 481 mm (D) × 376 mm (H)
Oven Cavity Dimensions :	16-1/4" (W) × 16-13/16" (D) × 9-1/2" (H) 412 mm (W) × 426 mm (D) × 242 mm (H)
Weight :	57 lbs (26 kg)
Specifications subject to change without notice.	

Panasonic®

Matsushita Services Company
Division of Matsushita Electric
Corporation of America
50 Meadowland Parkway,
Secaucus, New Jersey 07094

Panasonic Sales Company,
Division of Matsushita Electric
of Puerto Rico, Inc.
San Gabriel Industrial Park
65th Infantry Ave. Km.9.5
Carolina, P.R. 00630

Matsushita Electric
of Canada Limited
5770 Ambler Drive, Mississauga
Ontario, L4W 2T3

Copyright© 1990 by Matsushita Electric Corporation of America, All rights reserved.

206- AA-2

5057

WARNING

1. This product should be serviced only by trained qualified personnel.
2. Though this product has been manufactured in compliance with:
   "Federal Performance Standard 21 CFR Subchapter J" (D.H.H.S.): U.S.A. models
   or "Radiation Emitting Devices Act" (NHW): Canadian models
   it is very important all repairs should be made in accordance with procedures described in this manual to avoid being exposed to excessive microwave radiation.
3. Check for radiation leakage before and after every servicing according to the "procedure for measuring radiation leakage".
4. If the unit cannot be repaired on site, advise the customer not to use until unit be repaired.
5. Any serviceman who learns of any accident pertaining to microwave radiation leakage including the oven operating with open door should immediately notify the appropriate address listed below and Center for Devices and Radiological Health, DHHS.

IN U.S.A. (MSC)	Matsushita Services Company Division of Matsushita Electric Corporation of America 50 Meadowland Parkway, Secaucus, New Jersey 07094 Attention: Engineering Support Division. (201) 348-7000	IN PUERTO RICO (PSC)	PSC San Gabriel Industrial Park 65th Infantry Ave. Km.9.5 Carolina, Puerto Rico 00630 (809) 750-4300
		IN CANADA (MELCA)	Matsushita Electric of Canada Limited 5770 Ambler Drive, Mississauga, Ontario, L4W2T3 (416) 624-5010

6. There are special components used in the microwave oven which are important for safety. These parts are marked with a ⚠ on the replacement parts list. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent microwave leakage, shock, fire, or other hazards. Do not modify the original design.

PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

(A) Do not operate or allow the oven to be operated with the door open.

(B) Make the following safety checks on all ovens to be serviced before activating the magnetron or other microwave source, and make repairs as necessary:
   (1) Interlock operation
   (2) Proper door closing
   (3) Seal and sealing surfaces (arcing, wear, and other damage)
   (4) Damage to or loosening of hinges and latches.
   (5) Evidence of dropping or abuse

(C) Before turning on microwave power for any service test or inspection within the microwave generating compartments, check the magnetron, waveguide or transmission line, and cavity for proper alignment, integrity and connections.

(D) Any defective or misadjusted components in the interlock, monitor, door seal, and microwave generation and transmission systems shall be repaired, replaced, or adjusted by procedures described in this manual before the oven is released to the owner.

(E) A microwave leakage check to verify compliance with the Federal Performance Standard should be performed on each oven prior to release to the owner.

CONTENTS

(page)

FEATURE CHART 3
CONTROL PANEL 4
OPERATION AND DIGITAL PROGRAMMER CIRCUIT TEST PROCEDURE 5
SCHEMATIC DIAGRAM 8
DESCRIPTION OF OPERATING SEQUENCE 10
CAUTIONS TO BE OBSERVED WHEN TROUBLESHOOTING 13
DISASSEMBLY AND PARTS REPLACEMENT PROCEDURE 14
COMPONENT TEST PROCEDURE 19
MEASUREMENTS AND ADJUSTMENTS 21
PROCEDURE FOR MEASURING MICROWAVE ENERGY LEAKAGE 22
TROUBLESHOOTING GUIDE 23
EXPLODED VIEW AND PARTS LIST 26
SCHEMATIC DIAGRAM & PARTS LIST OF DIGITAL PROGRAMMER CIRCUIT 31

FEATURE CHART (NN models)

MODEL / FEATURE	NN-9800, NN-9850	NN-9500
3-STAGE COOKING	○	○
ONE TOUCH COOKING	○ (8 CATEGORIES)	—
AUTO DEFROST	○	○
AUTO REHEAT	—	○
COMBINATION (TIME COOKING)	○	○
BAKING (AUTO PREHEATING)	○	○
BAKING (TIME COOKING)	○	○
BROILING (AUTO PREHEATING)	○	○
BROILING (TIME COOKING)	○	○
AUTO START	○	○
STAND/TIMER	○	○
DIGITAL CLOCK	○	○
	○	○

FEATURE CHART (MQ models)

MODEL / FEATURE	MQC1408	MQC1403
3-STAGE COOKING	○	○
AUTOMATIC COOKING	○	—
WEIGHT DEFROST	○	○
PROGRAMMED REHEAT	—	○
CONVENIENCE FOODS	—	○
COMBINATION (TIME COOKING)	○	○
CONVECTION (AUTO PREHEATING)	○	○
CONVECTION (TIME COOKING)	○	○
BROILING (AUTO PREHEATING)	○	○
BROILING (TIME COOKING)	○	○
AUTO START	○	○
TIMER/STAND	○	○
DIGITAL CLOCK	○	○

CONTROL PANEL

NN-9850/NN-9800

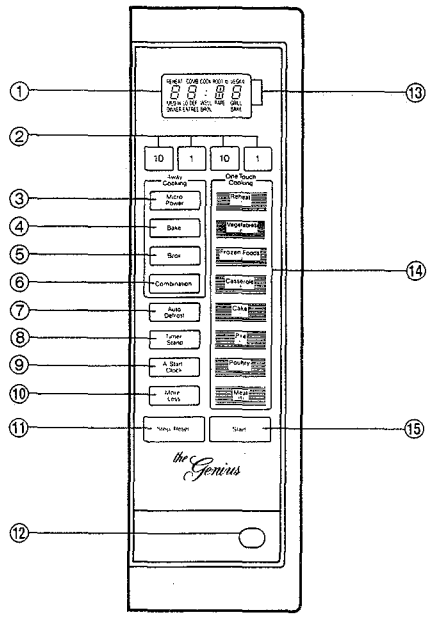

NN-9500

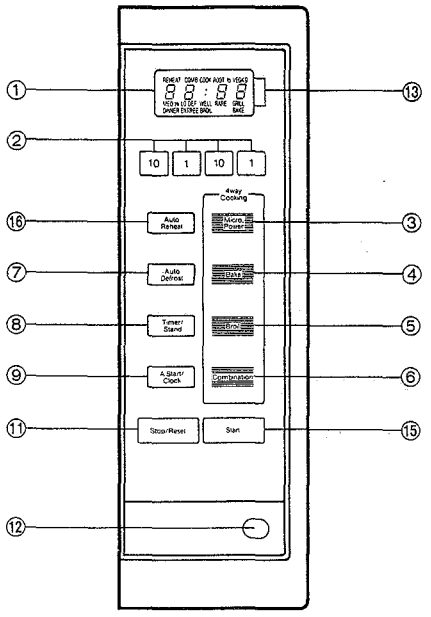

*Controls with Auto Count-Up Feature
This allows rapid advancement of displayed figure by continuously pressing the pad.

① Display Window
② Time Pads*
③ Micro Power Pad*
④ Bake Pad*
⑤ Broil Pad*
⑥ Combination Pad*
⑦ Auto Defrost Pad*
⑧ Timer/Stand Pad
⑨ Auto Start/Clock Pad
⑩ More/Less Pad
⑪ Stop/Reset Pad
⑫ Door Release Button
⑬ Indicator Lights
⑭ One Touch Cooking Pads*
⑮ Start Pad
⑯ Auto Reheat Pad*

MQC1408

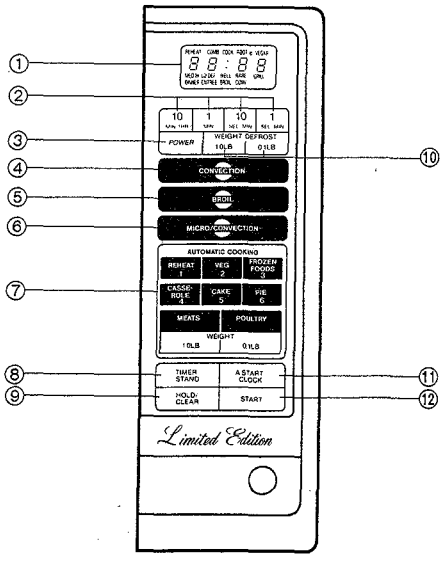

MQC1403

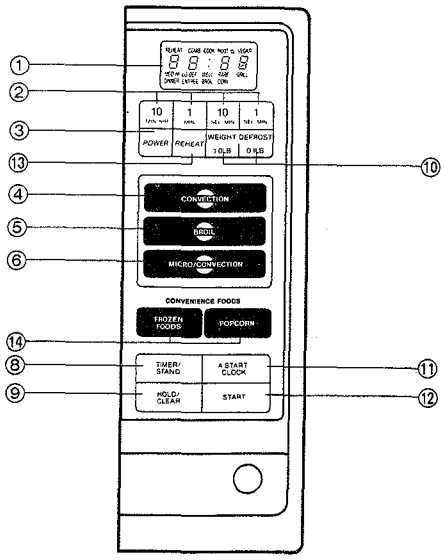

*Controls with Auto Count-Up Feature
This allows rapid advancement of displayed figure by continuously pressing the pad.

① Display Window
② Time Pads*
③ Power Pad*
④ Convection Pad*
⑤ Broil Pad
⑥ Micro/Convection Pad*
⑦ Automatic Cooking Pads*
⑧ Timer/Stand Pad
⑨ Hold/Clear Pad
⑩ Weight Defrost 1.0 lb./ 0.1 lb. Pads*
⑪ Auto Start/Clock Pad
⑫ Start Pad
⑬ Programmed Reheat Pad*
⑭ Convenience Foods Frozen Foods Pad* Popcorn Pad

OPERATION AND DIGITAL PROGRAMMER CIRCUIT TEST PROCEDURE

1. To Set Clock

OPERATION	DISPLAY
1. Plug the power supply cord into wall receptacle.	88:88
2. Tap [Clock] pad.	✳
3. Enter time of day (TOD) by tapping appropriate [number] pads.	11✳25
4. Tap [Clock] pad. TOD has now been registered into the digital programmer circuit and will count up by minutes.	11:25

2. Time Cooking For Two Stage

OPERATION	DISPLAY
1. Place a water load in the oven.	
2. Tap [Micro Power] pad once for High power. (1st stage)	HI
3. Set for 5 seconds by tapping [Number] pad.	5 HI
4. Tap [Micro Power] pad 4 times for Medium power. (2nd stage)	MED
5. Set for 10 seconds by tapping [Number] pad.	10 MED
6. Tap [Start] pad.	5 HI
7. When first stage cooking time has elapsed, oven automatically switches to 2nd stage cooking.	10 MED
8. When 2nd stage cooking time has elapsed, oven beeps 5 times and shuts off.	

3. Auto Defrost (NN models)

OPERATION	DISPLAY
1. Tap [Auto Defrost] Pad 6 times to set the weight for 3 pounds.	3.0 lb DEF
2. Tap [Start] Pad.	27:00 DEF
3. Tap [Stop/Reset] Pad twice Oven shuts off.	TOD reappears in the display window.

4. Weight Defrost (MQ models)

OPERATION	DISPLAY
1. Set the weight for 3 pounds by tapping 1.0 (LB) pad three times.	
2. Tap START Pad.	
3. Tap HOLD/CLEAR Pad twice Oven shuts off.	TOD reappears in the display window.

5. Auto Reheat (NN-9500)

OPERATION	DISPLAY
1. Tap Auto Reheat Pad once.	
2. Tap Start Pad.	
3. When cooking time has elapsed. • Oven beeps five times and shuts off.	• TOD reappears in the display window.

6. Programmed Reheat (MQC1403)

OPERATION	DISPLAY
1. Tap REHEAT Pad once.	
2. Tap START Pad.	
3. When cooking time has elapsed. • Oven beeps five times and shuts off.	• TOD reappears in the display window.

7. One Touch Cooking (Auto Sensor Cooking) (NN-9800, NN-9850) Reheat, Vegetables, Frozen Foods, Casserole

NOTE: Make sure that the outer panel is installed before Auto Sensor Cooking Test, since Auto Sensor function does not operate properly without the outer panel.

OPERATION	DISPLAY
1. Pour 150 ± 15cc (4.5 ± 1/2 ozs) of room temperature water in a beaker, securely cover the top of the beaker with plastic wrap and place the beaker in the center of the oven.	COVER THE TOP OF THE BEAKER WITH PLASTIC WRAP
2. Tap One Touch Cooking Reheat Pad.	
3. Tap Start Pad.	
4. The humidity sensor detects steam about 2 to 5 minutes after the Start Pad is tapped. Auto Sensor Cooking (T1) automatically switches to time cooking (T2). "1" disappears with beep sounds and the remainder of cooking time appears in display window. NOTE: Cooking time will vary depending on the water temperature, the shape of beaker or the power source voltage. NOTE: K factor for REHEAT program is 0.3.	 NOTE: If 27 to 120 appears, AUTO SENSOR FUNCTION is normal.
5. When the balance of cooking time has elapsed, oven stops and beeps five times.	• TOD reappears in the display window.

8. Automatic Cooking (Sensor Cooking)(MQC1408) Reheat, Vegetables, Frozen Foods, Casserole

NOTE: Make sure that the outer panel is installed before Humidity Sensor Cooking Test, since Humidity Sensor function does not operate properly without the outer panel.

OPERATION	DISPLAY
1. Pour 150 ± 15cc (4.5 ± 1/2 ozs) of room temperature water in a beaker, securely cover the top of the beaker with plastic wrap and place the beaker in the center of the oven.	COVER THE TOP OF THE BEAKER WITH PLASTIC WRAP
2. Tap Automatic Cooking REHEAT Pad.	

OPERATION	DISPLAY
3. Tap START Pad.	
4. The humidity sensor detects steam about 2 to 5 minutes after the START Pad is tapped. Humidity Sensor Cooking (T1) automatically switches to time cooking (T2). "1" disappears with beep sounds and the remainder of cooking time appears in display window. NOTE: Cooking time will vary depending on the water temperature, the shape of beaker or the power source voltage. NOTE: K factor for REHEAT program is 0.3.	 NOTE: If 27 to 120 appears, AUTO SENSOR FUNCTION is normal.
5. When the balance of cooking time has elapsed, oven stops and beeps five times.	• TOD reappears in the display window.

9. Bake Cooking with Preheat (NN models)

OPERATION	DISPLAY
1. Tap Bake pad twice.	
2. Tap Start pad.	
3. When preheating is completed, oven beeps 3 times. "P" begins to blink.	
4. After completion of preheating, be sure to open the door.	
5. Close the door and set bake cooking time for 2 minutes.	
6. Tap Start pad.	

10. Convection Cooking with Preheat (MQ models)

OPERATION	DISPLAY
1. Tap CONVECTION pad twice.	
2. Tap START pad.	
3. When preheating is completed, oven beeps 3 times. "P" begins to blink.	
4. After completion of preheating, be sure to open the door.	
5. Close the door and set convection cooking time for 2 minutes.	
6. Tap START pad.	

SCHEMATIC DIAGRAM

NN-9500/NN-9850 APH

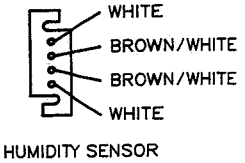

HUMIDITY SENSOR

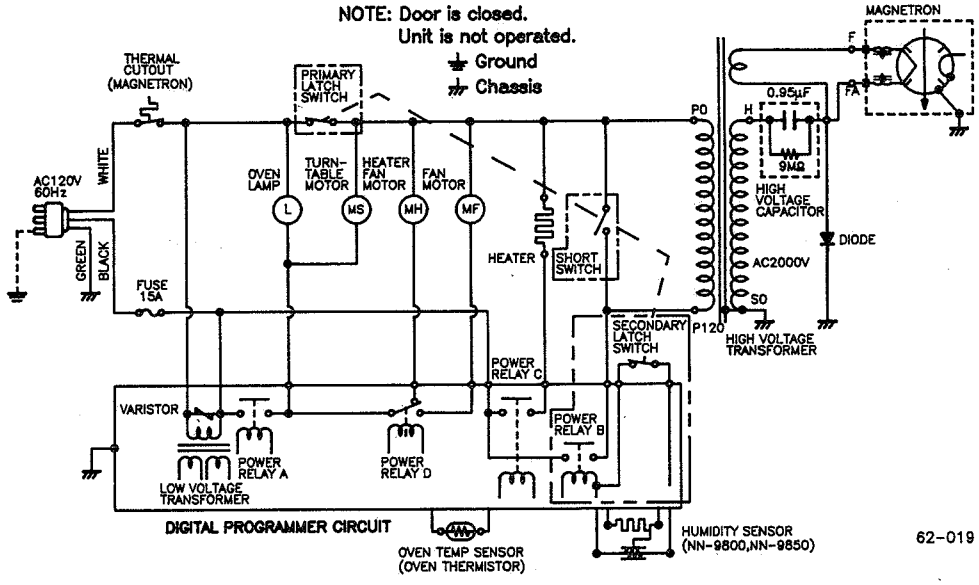

NN-9800/NN-9850 CPH

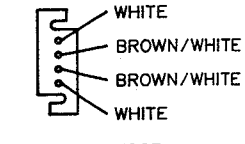

HUMIDITY SENSOR

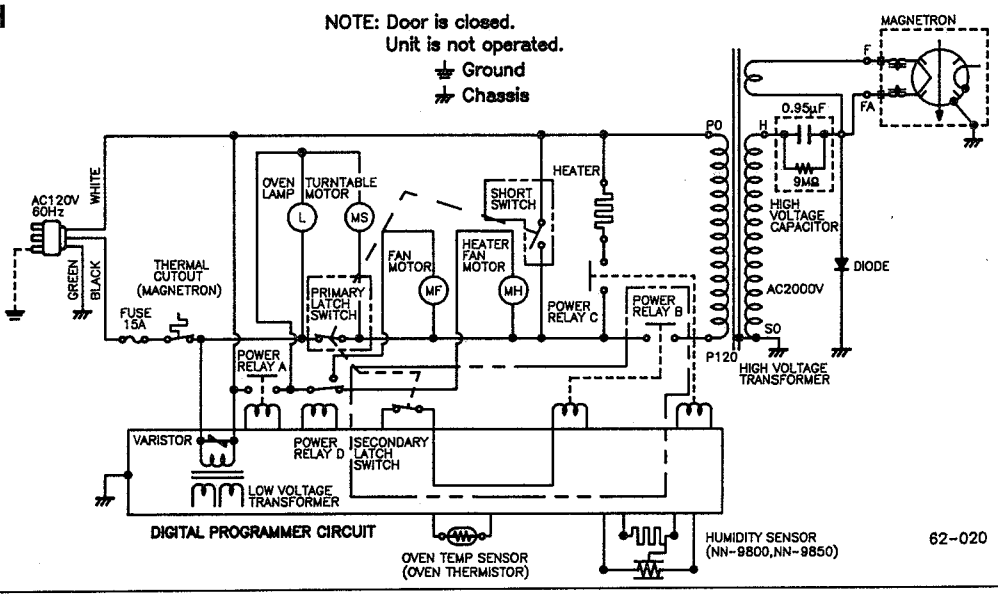

MQC1408/MQC1403 AQH

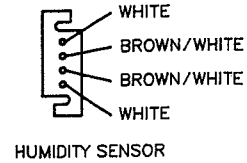

HUMIDITY SENSOR

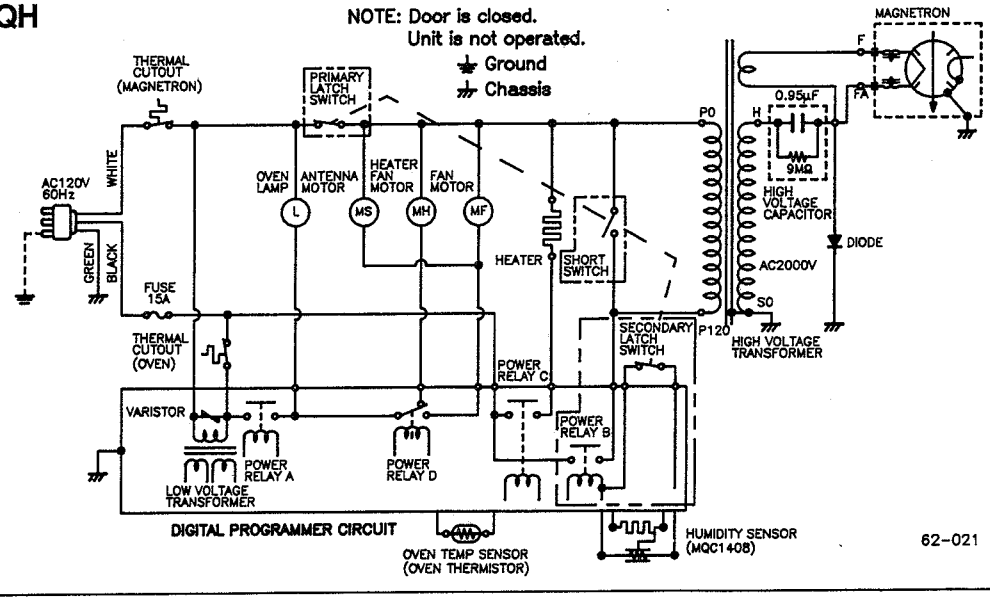

SCHEMATIC DIAGRAM

MQC1408 CQH

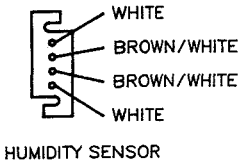

NOTE: Door is closed.
Unit is not operated.
Ground
Chassis

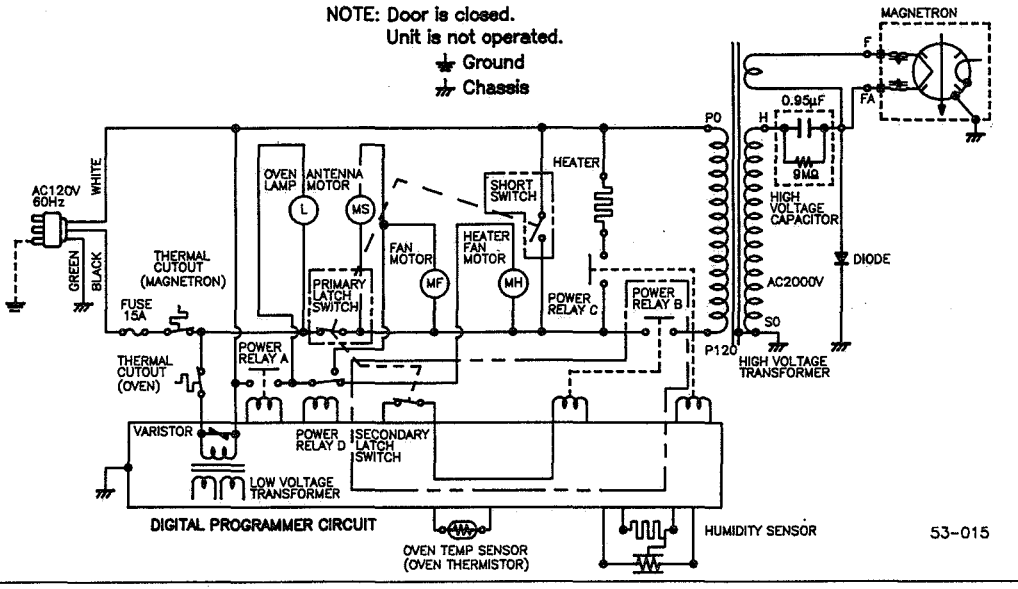

WIRING DIAGRAM

		APH	CPH	AQH	CQH
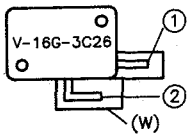 PRIMARY LATCH SWITCH (TOP)	①	W/W/W	BR/B	W/W	B/BL
	②	W/W	B/B	W/W	B/B
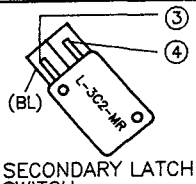 SECONDARY LATCH SWITCH (BOTTOM)	③	BL	BL	——	——
	④	BL	BL	——	——
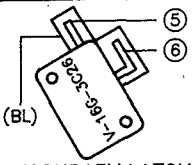 SECONDARY LATCH SWITCH (BOTTOM)	⑤	——	——	BL	BL
	⑥	——	——	BL	BL
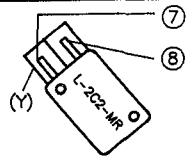 SHORT SWITCH (BOTTOM)	⑦	W/Y	Y/Y	——	——
	⑧	BL	GR/BL	——	——

		APH	CPH	AQH	CQH
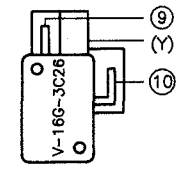 SHORT SWITCH (BOTTOM)	⑨	——	——	W/W	BL/W
	⑩	——	——	Y	B/B
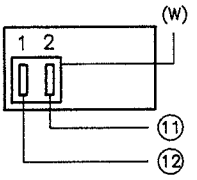 POWER RELAY B	⑪	BL/BL	BL	B/Y	GR
	⑫	B/B	B/GR	B/B	B/W
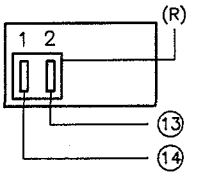 POWER RELAY C	⑬	B	B	B	B
	⑭	——	——	——	——

NOTE: *When replacing, check the lead wire colour as shown.
*Colours shown by ( ) indicate colours of lead wire connector housing.

SYMBOL	COLOUR
OR	ORANGE
BL	BLUE
BR	BROWN
W	WHITE
Y	YELLOW
R	RED
GR	GRAY
B	BLACK

53-016

DESCRIPTION OF OPERATING SEQUENCE

1. Variable power cooking control

The coil of power relay B (RY2) is energized intermittently by the digital programmer circuit, when the oven is set at any power selection except for High power position. The digital programmer circuit controls the ON-OFF time of power relay B contacts in order to vary the output power of the microwave oven from "Warm" to "High" power. One complete ON and OFF cycle of power relay B is 22 seconds. The relation between indications on the control panel and the output of the microwave oven is as shown in table.

NOTE: The ON/OFF time ratio does not correspond with the percentage of microwave power since approximately 2 seconds are required for heating of magnetron filament.

POWER SETTING	OUTPUT POWER(W) APPROX.	ON-OFF TIME OF POWER RELAY B (RY2)	
		ON(SEC)	OFF(SEC)
HIGH	700	22	0
MEDIUM-HIGH	490	17	5
MEDIUM	360	13	9
MEDIUM-LOW	200	8	14
LOW	70	4	18
DEFROST	200W	8	14

2. Auto/weight defrost, Auto/Programmed reheat control

When those Auto Control feature is selected and the Start Pad is tapped:

(A) The digital programmer circuit determines the power level and cooking time to complete cooking and indicates the operating state in the display window.
Table shows the corresponding cooking times for respective serving by categories.

(B) When cooking time in the display window has elapsed, the oven turns off automatically by a controll signal from the digital programmer circuit.

Auto/Weight Defrost

WEIGHT SELECTED	TOTAL DEFROSTING TIME
3 LB	27 min. 00 sec.

Auto Reheat (NN-9500)

SERVING	COOKING TIME
1	2 min. 30 sec.

Programmed Reheat (MQC1403)

CATEGORY	COOKING TIME
1	3 min. 00 sec.

4. Baking/Convection cooking control

The digital programmer circuit controls the ON-OFF time of the heater in order to control oven cavity temperature.

(A) After the start pad is tapped with the desired baking/convection program set, an 18V DC signal comes out of the digital programmer circuit and is applied to coil of power relay C (RY4).

(B) When the contacts of power relay C close, power source voltage (120V AC) is applied to the heater and the heater turns on.

(C) When the oven temperature reaches the set temperature, the digital programmer circuit senses the temperature through oven temp sensor and stops supplying an 18V DC signal to the coil of power relay C and the heater turns off.

(D) After the heater turns off, the oven temperature will continue increasing a while and then decrease as shown in Figure. When the oven temperature drops below the set temperature, the digital programmer circuit senses the signal and starts supplying an 18V DC signal to the coil of power relay again.

NOTE: When Broil feature is selected, oven temperature is determined automatically as shown in Figure.

5. Combination cooking control

Combination cooking is accomplished by microwave and baking-/convection cooking being done alternately during one combination cooking cycle. One combination cooking cycle is 22 seconds.

(A) During combination cooking, the digital programmer circuit controls ON-OFF time of both power relay B and C as shown in Figure.

(B) When the power relay B (RY2) is turned on, heater turns off and after the power relay B turns off, power relay C turns on.

NOTE 1: Note that the heater may not be on during a heater on period if the preprogrammed oven temperature has been reached. This is due to the fact that the oven is keeping the preprogrammed oven temperature constant, so of course the heater will only be on when it is needed and off when it is not needed.

NOTE 2: As for temperatures of combination cooking for convection, the temperatures by each program are preprogrammed in the microprocessor as shown in Figure.

Baking/Convection Cooking

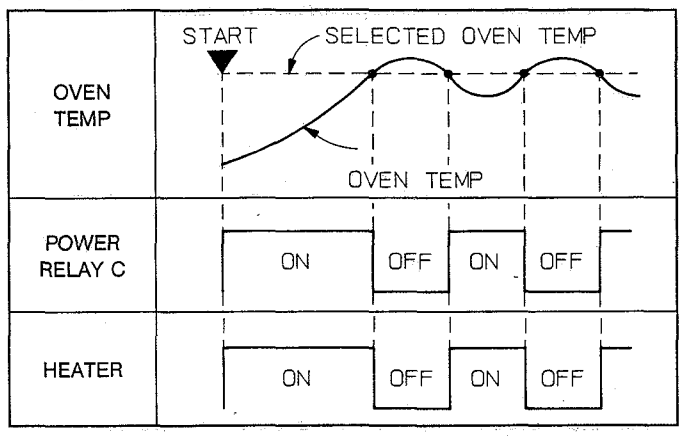

Broil Cooking

CATEGORY	OVEN TEMP
Broil	450°F

Combination Cooking

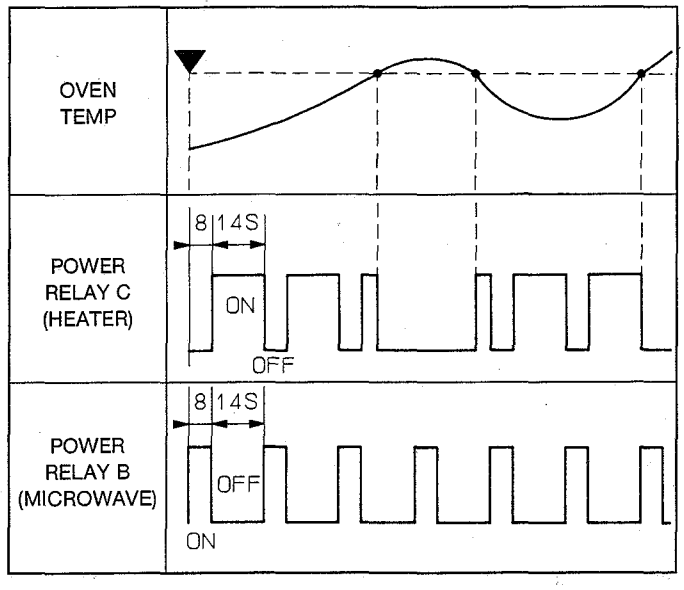

Combination Cooking

CATEGORY	MICROWAVE	HEATER	OVEN TEMP
1	8/22 SEC	14/22 SEC	275°F

6. One Touch/Automatic Cooking (Auto Weight Combination)(Poultry, Meat)

When the One Touch/Automatic Cooking Control, Combination Cooking feature is selected by tapping the appropriate key pads and Start pad is tapped.

(A) The digital programmer circuit determines the power level, oven temperature and combination cooking time to complete combination cooking and indicates the operating state in the display window.
Table shows the combination cooking times for respective weights.

(B) When the combination cooking time in the display window has elapsed, the oven turns off automatically by the controlled signal from the digital programmer circuit.

WEIGHT SELECTED	TOTAL COOKING TIME POULTRY
3 LB	50 min.

7. One Touch/Automatic Cooking (Sensor Cooking) (Reheat, Vegetables, Frozen Foods, Casserole)

One Touch/Automatic Cooking is a revolutionary way to cook by microwave without setting a power level or selecting a time.
All that is necessary is to select an One Touch/Automatic Cooking Program before starting to cook.

Understanding of Cooking

As food cooks, a certain amount of steam is produced. If the food is covered, this steam builds up and eventually escapes from the container. In One Touch/Automatic Cooking, a carefully designed instrument, called the humidity sensor element, senses this escape of steam. Then, based upon the One Touch/Automatic Cooking Program selected, the unit will automatically determine the correct power level and the proper length of time it will take to cook the food.

NOTE: **One Touch/Automatic Cooking is successful with the foods and recipes found in the One Touch/Automatic Cooking Guide. Because of the vast differences in food composition, items not mentioned in the Cooking Guide should be prepared in the microwave oven using power select and time features. Please consult Variable Power Microwave Cookbook for procedures.**

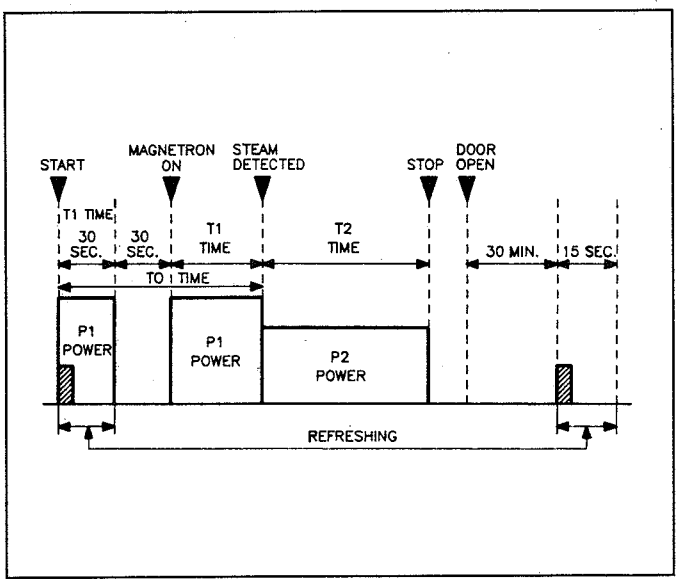

Explanation of the One Touch/Automatic Cooking process

1) The shaded columns in Figure indicate when the humidity sensor heater is on.
2) During the 30 second period there is no microwave activity. When calculating the T2 time by using the formula below, make sure this 30 seconds is subtracted from the T0 time.
3) T1 time·····The total amount of time it takes the microwave oven. During this time one of the One Touch/Automatic Cooking programs will be shown in display.
4) T2 time·····When the steam escapes from the cooking container placed in the oven, the humidity sensor detects it and the microprocessor calculates the balance of cooking time. This T2 time is then shown in the display and begins counting down.

Balance of cooking time (T2 time)

The balance of cooking time which is called T2 time, can be calculated by the following formula.

T2 time (in sec.) = T1 time × K factor

NOTE: **Remember, the T1 time starts after the Start pad is tapped. The coefficient K is programmed into the microprocessor memory and they are listed in the following tables along with the P1 and P2 powers.**

Category	P1 Power	P2 Power	K factor
1. Reheat	HIGH	HIGH	0.3

Example of calculating the T2 time

Example 1: If the T1 time is measured to be 2 minutes and 40 seconds, and the One Touch/Automatic Cooking program selected is Reheat.

T2 = T1 × K
= 2 min. and 40 sec. × 0.3
= 160 sec. × 0.3
= 400 sec.
= 6 min. 40 sec.

CAUTIONS TO BE OBSERVED WHEN TROUBLESHOOTING

Unlike many other appliances, the microwave oven is high-voltage, high-current equipment. Though it is free from danger in ordinary use, extreme care should be taken during repair.

CAUTION

Servicemen should remove their watches whenever working close to or replacing the magnetron.

1. Check the grounding

Do not operate on a 2-wire extension cord. The microwave oven is designed to be used when grounded. It is imperative, therefore, to make sure it is grounded properly before beginning repair work.

2. Warning about the electric charge in the high voltage capacitor

For about 30 seconds after the oven is turned off, an electric charge remains in the high voltage capacitor.
When replacing or checking parts, remove the power plug from the outlet and short the terminal of the high voltage capacitor (terminal of lead wire from diode) to chassis ground with an insulated handle screwdriver or insulated jumper lead wire to discharge.

WARNING

There is high-voltage present, with high-current capabilities in the circuits of the high voltage winding and filament winding of the high voltage transformer. It is extremely dangerous to work on or near these circuits with oven energized.
DO NOT measure the voltage in the high voltage circuit including filament voltage of magnetron.

WARNING

Never touch any circuit wiring with your hand nor with an insulated tool during operation.

3. When parts must be replaced, remove the power plug from the outlet.

4. When the 15 Amp fuse is blown due to the operation of short switch:

WARNING

When the 15 Amp. fuse is blown due to the operation of short switch, you must replace Primary latch switch and short switch. For U.S.A. models, also replace power relay B when the continuity check reads shorted contacts (1-2).

(A) This is mandatory. Refer to "Adjustments and Measurement" for these switches.
(B) When replacing the fuse, confirm that it has the appropriate rating for these models.
(C) When replacing faulty switches, be sure mounting tabs are not bent, broken or otherwise deficient in their ability to hold the switches.

5. Avoid inserting nails, wire, etc. through any holes in the unit during operation.

Never insert a wire, nail or any other metal object through the lamp holes on the cavity or any other holes or gaps, because such objects may work as an antenna and cause microwave leakage.

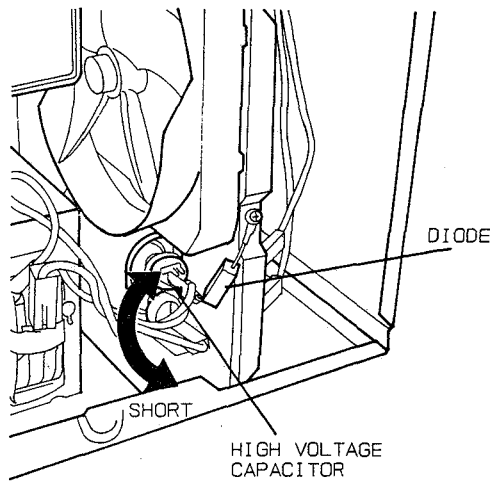

Touch chassis side first then short to the high voltage capacitor terminal.

6. Confirm after repair

(A) After repair or replacement of parts, make sure that the screws of the oven, etc. are neither loose nor missing.
Microwaves might leak if screws are not properly tightened.
(B) Make sure that all electrical connections are tight before inserting the plug into the wall outlet.
(C) Check for microwave energy leakage. (Refer to procedure for measuring microwave energy leakage).

DISASSEMBLY AND PARTS REPLACEMENT PROCEDURE

1. Magnetron

(A) Discharge the high voltage capacitor.
(B) Remove 2 screws holding air guide A.
(C) Remove 1 screw holding air guide B. (MQ models)
(D) Disconnect 2 high voltage lead wires from magnetron filament terminals.
(E) Remove 4 screws holding the magnetron.
NOTE: After replacement of the magnetron, tighten mounting screws properly making sure there is no gap between the waveguide and the magnetron to prevent microwave leakage.

CAUTION
When replacing the magnetron, be sure the antenna gasket is in place.

CAUTION
When connecting 2 filament lead wires to the magnetron terminals, be sure to connect the lead wires in the correct position. The lead wire of high voltage transformer should be connected to "F terminal" and the lead wire from high voltage capacitor should be connected to "FA terminal".

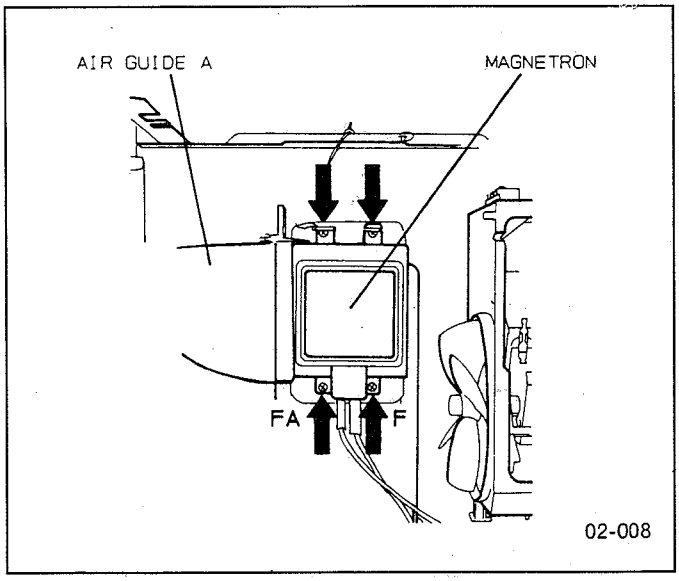

2. Digital programmer circuit (DPC) and membrane key board. (NN models)

NOTE: Be sure to ground any static electric charge built up on your body, before handling the DPC.
(A) Disconnect all connectors from D.P.C.
(B) Remove 1 screw holding escutcheon base and slide the escutcheon base upward slightly.
(C) Release CN4 connector's lock of DPC by pushing both levers to inside and pull them upward, and remove flat cable of membrane key board.
(D) Remove 2 screws holding DPC.

To replace membrane key board

(E) Remove escutcheon bracket from escutcheon base by freeing 4 catch hooks on the escutcheon base.
(F) Push the upper part of key board sheet (display window portion) from back of escutcheon base and peel key board sheet.
(G) Peel off membrane key board from escutcheon base.
NOTE: 1. The membrane key board is attached to the escutcheon base with double faced adhesive tape.
2. When installing new membrane key board, make sure that the surface of escutcheon base is cleaned sufficiently so that any problems (shorted contacts or uneven surface) can be avoided.

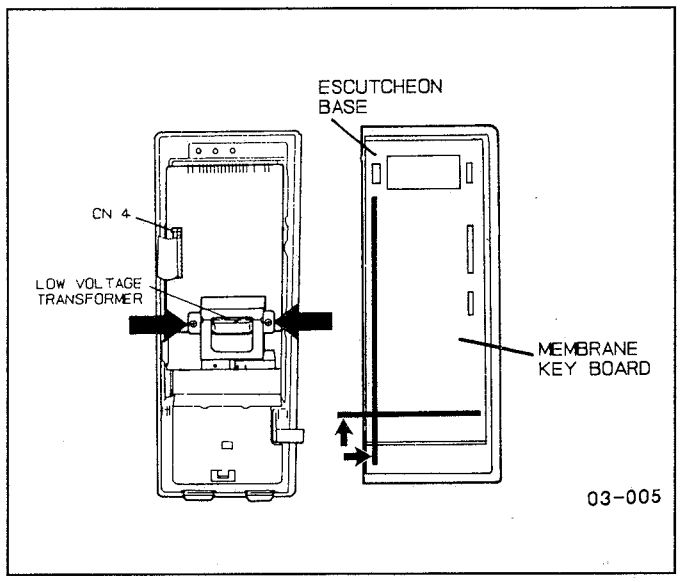

3. Digital programmer circuit (DPC) and membrane key board.(MQ models)

NOTE: Be sure to ground any static electric charge built up on your body, before handling the DPC.
(A) Disconnect all connectors from D.P.C.
(B) Remove 2 screw holding escutcheon base and slide the escutcheon base upward slightly.
(C) Release CN4 connector's lid and pull off the flat cable of the membrane key board.
(D) Remove 4 screws holding DPC.

To replace membrane key board

(E) Remove 2 screws holding escutcheon bracket to the escutcheon base.
(F) Peel off the membrane key board from the escutcheon bracket.
NOTE: 1. The membrane key board is attached to the escutcheon bracket with double faced adhesive tape.
2. When installing new membrane key board, make sure that the surface of escutcheon bracket is cleaned sufficiently so that any problems (shorted contacts or uneven surface) can be avoided.
3. Make sure that new membrane key board is aligned to the left and lower edges of the escutcheon bracket.

(MQ models)

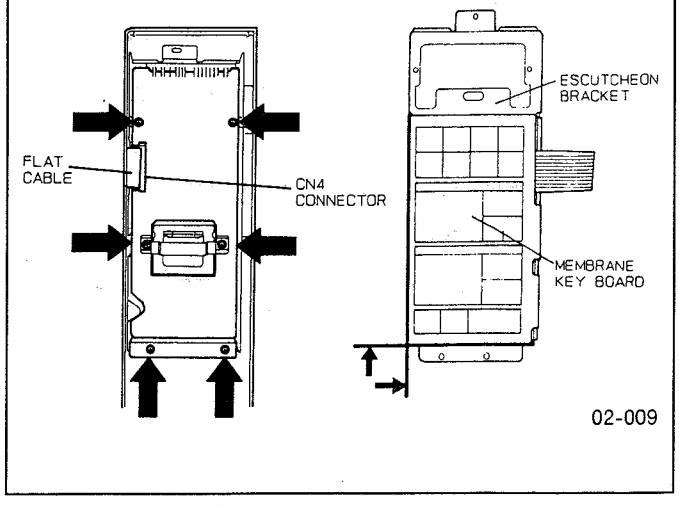

4. Low voltage transformer and/or power relays (RY1, 2, 4, 5)

NOTE: Be sure to ground any static electric charge built up on your body before handling the DPC.

(A) Using solder wick or a desoldering tool and 30W soldering iron, carefully remove all solder from the terminal pins of the low voltage transformer and/or power relays.

NOTE: Do not use a soldering iron or desoldering tool of more than 30 watts on DPC contacts.

(B) With all the terminal pins cleaned and separated from DPC contacts, remove the defective transformer/power relays and install new transformer/power relays making sure all terminal pins are inserted completely. Resolder all terminal contacts carefully.

5. Fan motor and high voltage capacitor (NN models)

(A) Disconnect 2 lead wires from fan motor terminals.
(B) Disconnect 2 lead wires from fuse holder terminals.
(C) Disconnect 4 high voltage lead wires from high voltage capacitor terminals.
(D) Remove 4 screws holding fan motor and orifice assy and detach the orifice assy with fan motor from oven assy.
(E) Remove fan blade from the fan motor shaft by pulling it straight out.
(F) Separate the fan motor from the orifice assy by freeing 2 catch hooks on the orifice assy.

To replace high voltage capacitor

(G) Remove 1 screw holding high voltage capacitor

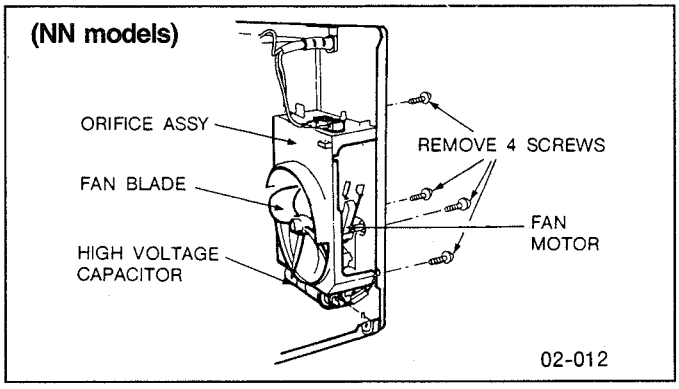

6. Fan motor and high voltage capacitor (MQ models)

(A) Disconnect 2 lead wires from fan motor terminals.
(B) Disconnect 2 lead wires from fuse holder terminals.
(C) Disconnect 4 high voltage lead wires from high voltage capacitor terminals.
(D) Disconnect 1 lead wire from thermal cutout terminal.
(E) Remove 1 screw from power supply cord.
(F) Remove 1 screw holding oven reinforcement bracket.
(G) Remove 3 screws holding fan motor bracket and detach the fan motor bracket with fan motor from oven assy.
(H) Remove fan blade from the fan motor shaft by pulling it straight out.
(I) Remove 2 screws holding the fan motor to the fan motor bracket.

To replace high voltage capacitor

(J) Remove 1 screw holding high voltage capacitor.

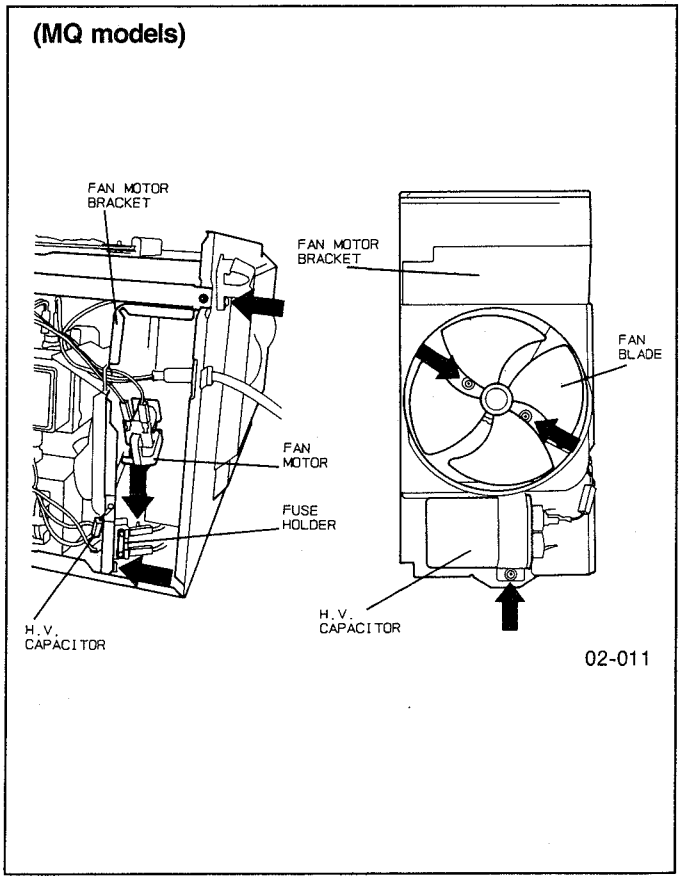

7. Heater

(A) Remove lead wires from lead wire holders.
(B) Remove belt from pulleys of circulation fan.
(C) Remove 2 screws holding oven temp sensor.
(D) Remove 2 lead wires from heater terminals by removing screws.
(E) Remove 5/6 screws holding the both sides of heater unit and lift it up carefully.
(5 screws for NN models
6 screws for MQ models)
(F) Remove 2 spring nuts from heater terminals.
(G) Remove 2 screws holding heater supports and detach the heater.

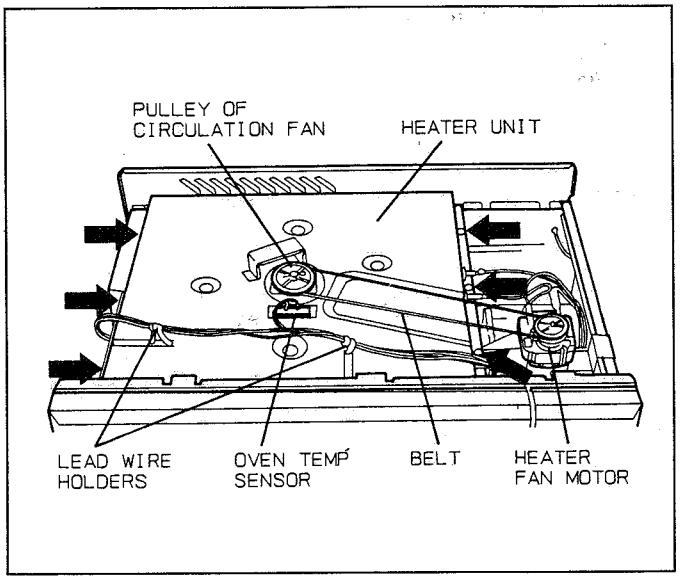

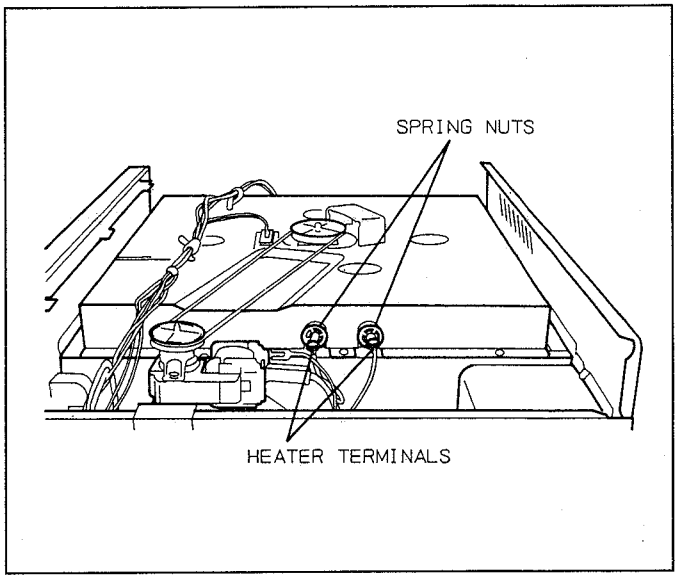

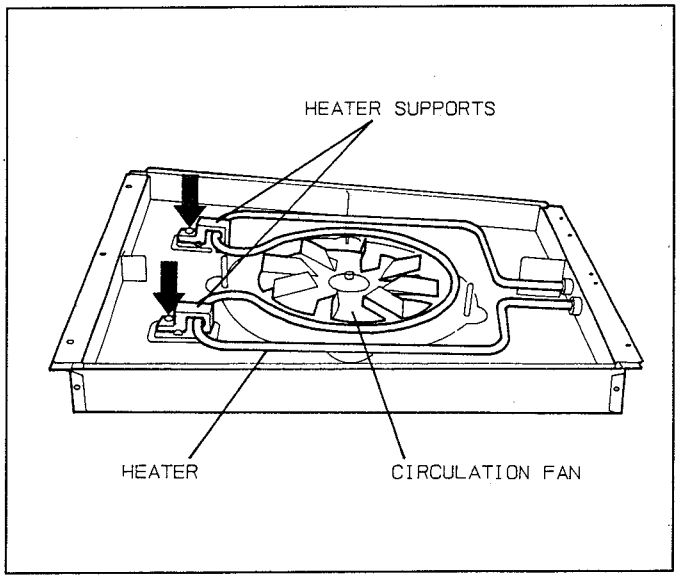

8. Door assembly

(A) Open the door and remove 4 screws holding door C.
(B) Remove the door C from door E by carefully pulling outward starting from upper right hand corner.
(C) Remove door key spring and remove 3 screws holding door handle. (MQ models)
(D) Separate the door A from the door E by freeing 8/6 catch hooks on the door A.
(E) Remove door key spring and door key. (NN models)
(F) Remove door keys, door key lever, door key spring and door key pins. (MQ models)

After replacement of the defective component parts of the door, reassemble it and follow the instructions below for proper installation and adjustment so as to prevent an excessive microwave leakage.

(1) When mounting the door to the oven, be sure to adjust the door parallel to the bottom line of the oven face plate by moving the upper hinge and lower hinge in the direction necessary for proper alignment.
(2) Adjust so that the door has no play between the inner door surface and oven front surface. If the door assembly is not mounted properly, microwave may leak from the clearance between the door and oven.
(3) Perform the microwave leakage test.

9. Turntable/Antenna motor

(A) Remove 2 screws holding motor cover.
(B) Disconnect 2 lead wires from turntable/antenna motor.
(C) Remove 2 screws holding turntable/antenna motor.

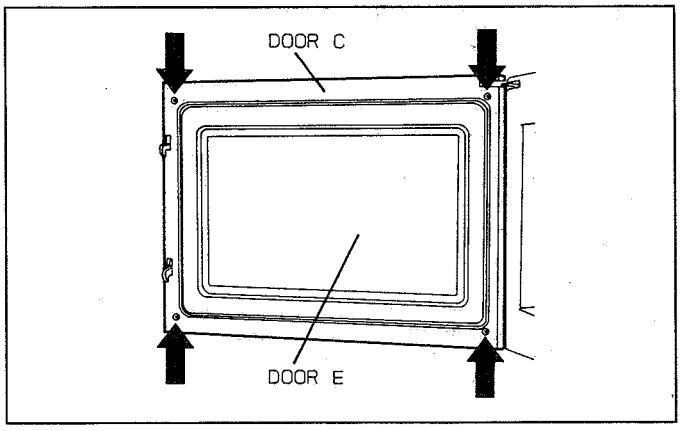

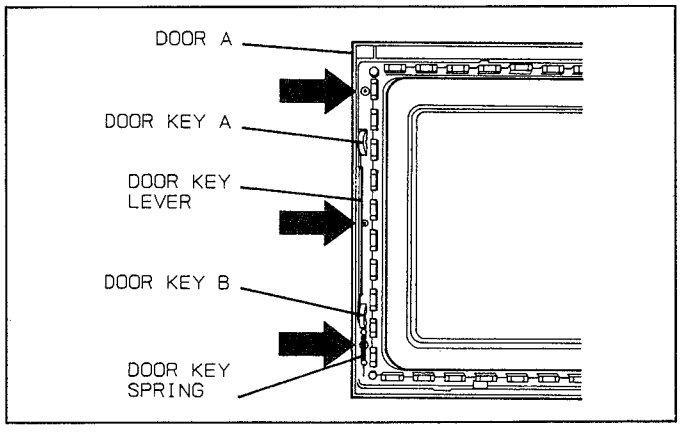

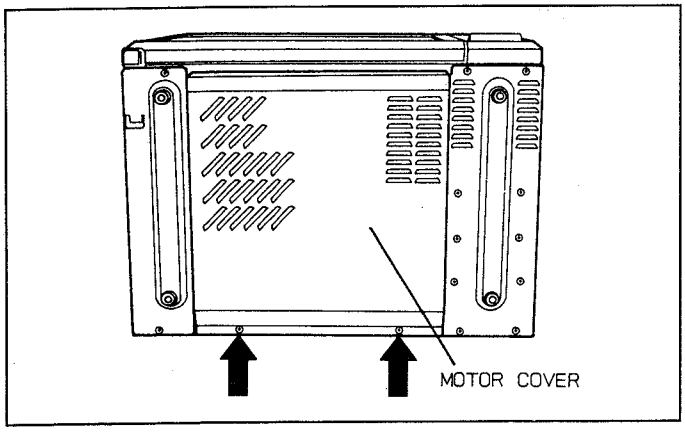

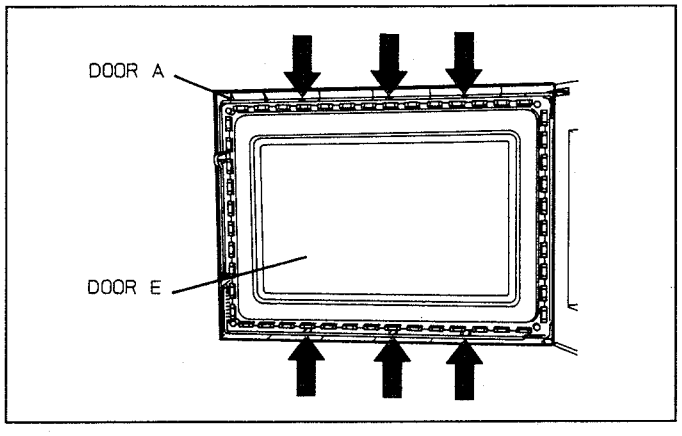

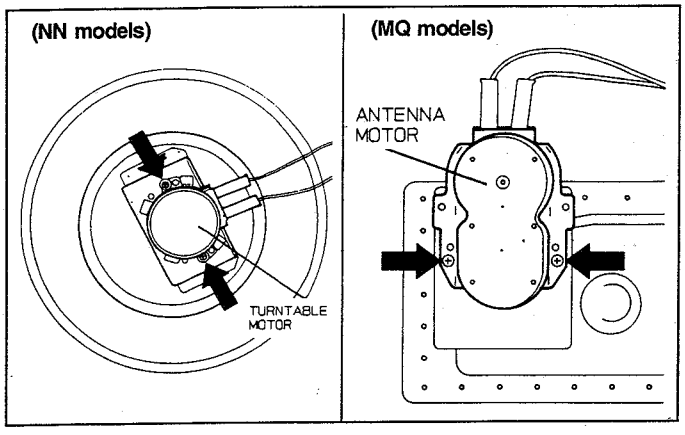

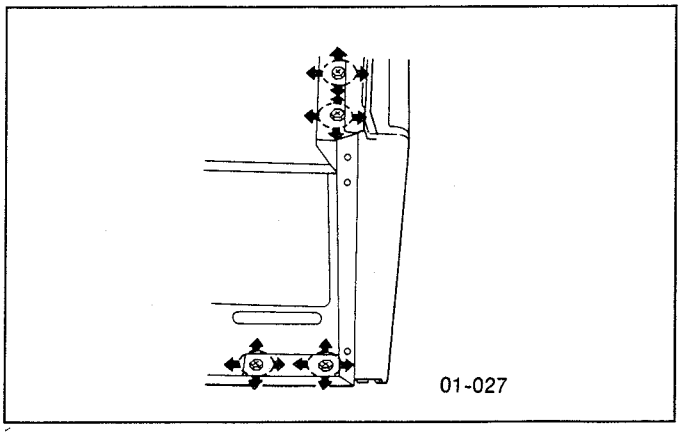

10. Floor shelf and/or moving antenna(MQ models)

(A) Bend metal cover which covers the floor shelf removal opening located on left side oven wall and insert a phillips type screwdriver or equivalent approx.3" (7.5 cm) in shaft length in the hole.
(B) Carefully lift up the floor shelf by using the screwdriver until the floor shelf is lifted up over the level of oven opening front.
(C) Remove the floor shelf by lifting it up from oven front.

To replace the moving antenna.

(D) Remove the moving antenna by simply lifting it up off the antenna motor shaft.
NOTE: **When replacing the moving antenna, make sure the plastic antenna spacers are correctly in place.**
(E) When installing floor shelf in position, make sure that front edge side of the floor shelf is inserted in position first then press down the rear side.

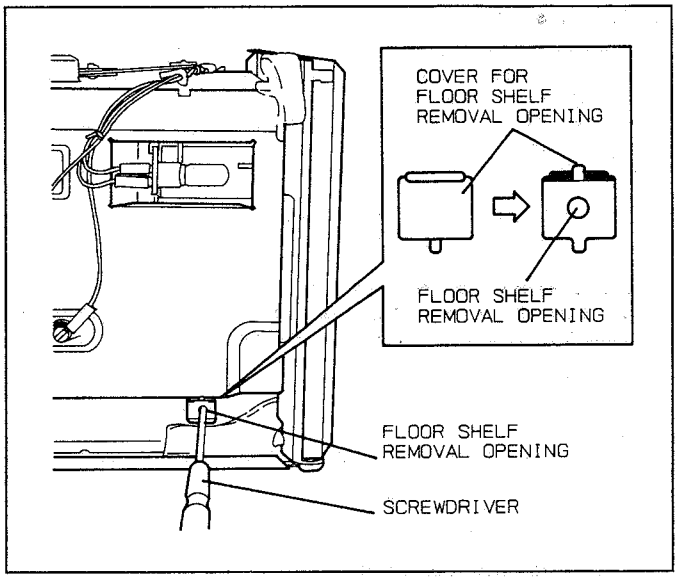

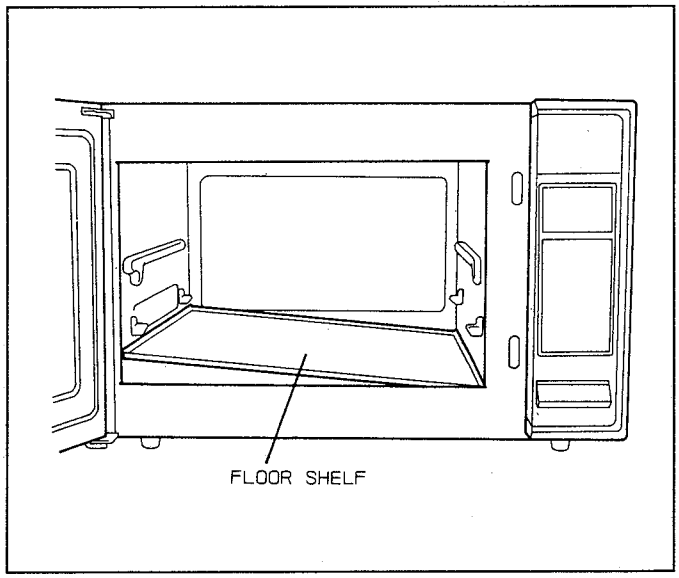

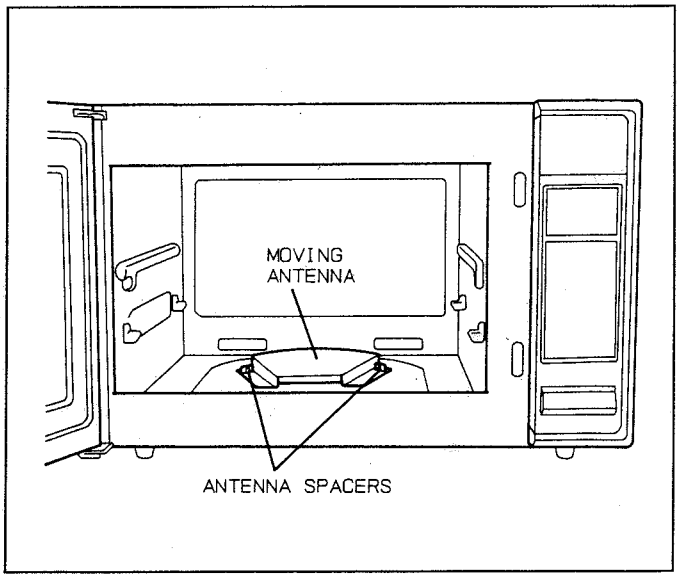

COMPONENT TEST PROCEDURE

CAUTION

1. High voltage is present at the high voltage terminal of the high voltage transformer during any cook cycle.
2. It is neither necessary nor advisable to attempt measurement of the high voltage.
3. Before touching any oven components, or wiring, always unplug the oven from its power source and discharge the high voltage capacitor.

1. Primary Latch Switch, Secondary (Secondary Latch Switch and Power relay B) Interlocks.

(A) Unplug lead connectors to Power Relay B and verify continuity of the power relay B 1-2 terminals.
(B) Unplug lead connectors to Primary Latch Switch and Secondary Latch Switch.
(C) Test the continuity of switches at door opened and closed positions with ohm meter (low scale).
Normal continuity readings should be as follows.

	Door Opened	Door Closed
Primary Latch Switch	∞ Ω (open)	0 Ω (close)
Secondary Latch Switch	∞ Ω (open)	0 Ω (close)
Power Relay B	∞ Ω (open)	∞ Ω (open)

2. Short Switch & Monitor Circuit

(A) Unplug lead wires from H.V. transformer primary terminals.
(B) For CPH/CQH only
make short circuit across the lead wires connected to power relay B (RY2) with temporary jumper wire for testing.
(C) Connect test probes of ohm meter to the disconnected leads which were connected to H.V. Transformer.
(D) Test the continuity of short switch with door opened and closed positions using lowest scale of the ohm meter.
Normal continuity readings should be as follows.

Models	Door closed	Door opened
Touch Models	∞ Ω	0 Ω
Mechanical Models	Some Ohm See Note	0 Ω

NOTE: In this case, the ohm meter indicates some resistance of the part(s) such as oven lamp, blower fan motor, etc. connected in parallel with the monitor circuit.

3. High voltage transformer

(A) Remove connections from the transformer terminals and check continuity.
(B) Normal (cold) resistance readings should be as follows:
Secondary winding ····· Approx. 80Ω~120Ω
Filament winding ····· Approx. 0Ω
Primary winding ····· Approx. 0Ω~ 1Ω

4. High voltage capacitor

(A) Check continuity of capacitor with meter on highest OHM scale.
(B) A normal capacitor will show continuity for a short time, and then indicate 9MΩ once the capacitor is charged.
(C) A shorted capacitor will show continuous continuity.
(D) An open capacitor will show constant 9MΩ.
(E) Resistance between each terminal and chassis should be infinite.

5. Magnetron

Continuity checks can only indicate an open filament or a shorted magnetron. To diagnose for an open filament or shorted magnetron.
(A) Isolate magnetron from the circuit by disconnecting the leads.
(B) A continuity check across magnetron filament terminals should indicate one ohm or less.
(C) A continuity check between each filament terminal and magnetron case should read open.

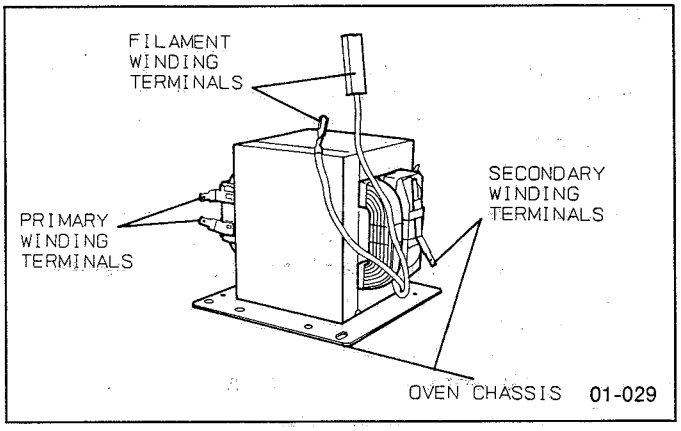

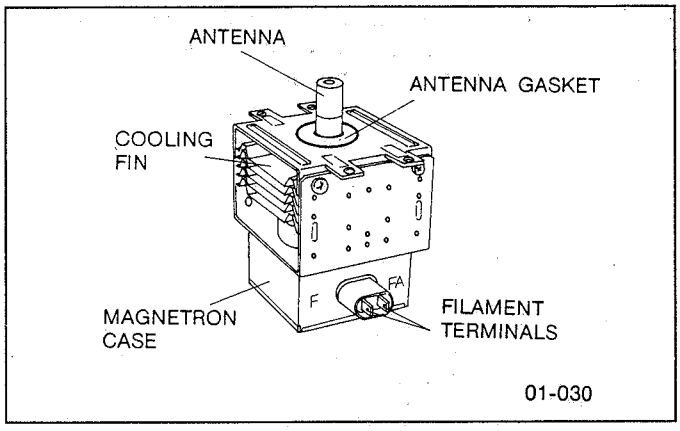

6. Diode

(A) Isolate the diode from the circuit by disconnecting the leads.
(B) With the ohmmeter set on the highest resistance scale, measure the resistance across the diode terminals. Reverse the meter leads and again observe the resistance reading. Meter with 6V, 9V or higher voltage batteries should be used to check the front-to-back resistance of the diode, otherwise an infinite resistance may be read in both directions.
A normal diode's resistance will be infinite in one direction and several hundred kΩ in the other direction.

7. Membrane key board (Membrane switch assembly)

Check continuity between switch terminals, by tapping an appropriate pad on the key board. The contacts assignment of the respective pads on the key board is as shown in digital programmer circuit.

8. Humidity Sensor and digital programmer circuit

CAUTION
Do not touch any parts of the circuitry on the digital programmer circuit since static electric discharge may damage this control panel.
Always ground yourself while working on this panel to discharge any static charge built up on your body.

(A) Check across sensor heater terminals. Normal cold resistance should read approx. 4.5 ohm.
(B) In order to determine if the Auto/Humidity Sensor function of the digital programmer circuit is in working order or not, do the following test.
1) Place a water load in the oven.
2) Unsolder 2 brown/white wires connected to sensor terminals.
3) Tap One Touch/Automatic Cooking Reheat Pad once to set One Touch/Automatic Cooking at "Reheat" and tap Start Pad.
4) About 10 seconds after Start Pad is touched, short 2 brown/white wires for 5 seconds and then remove them. Before shorting the 2 brown/white wires you can watch the sensor heater glow red.
5) Approx. 75 seconds after the Start Pad is pressed (T0 TIME), short the 2 brown/white wires again
6) "1" should disappear in display window and following digits (see chart) should appear indicating **balance of cooking time (T2 TIME).
The time should start to count down and oven should shut off when the time has elapsed.

* T0 TIME	** T2 TIME (balance of cooking time)
70 sec.~79 sec.	12 sec.
80 sec.~89 sec.	15 sec.

The Auto Sensor function in the digital programmer circuit is working in order if above condition is obtained.

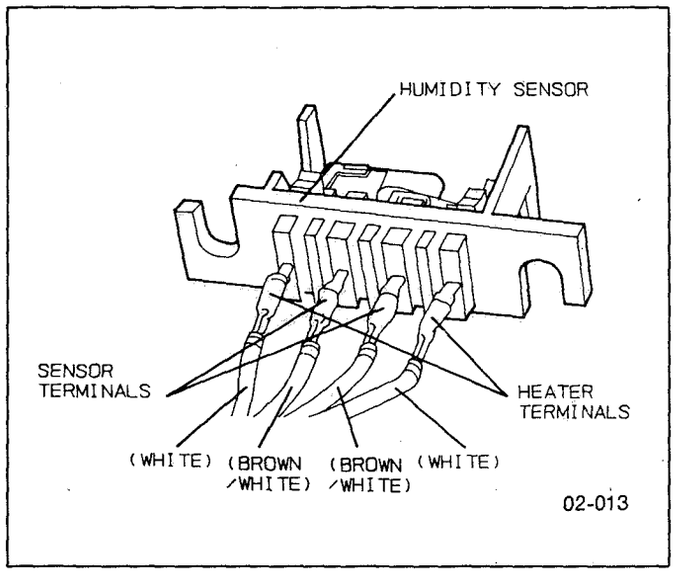

9. Oven temp sensor thermistor

This sensor monitors the heat produced by the heater circuit and maintains the oven temperature the user had selected.Normal room temperature, especially in a kitchen can vary anywhere from 50°F to 90°F. The reading across the oven sensor thermistor should be within 300K ohm to 1500K ohm when reading in an area within the 50°F to 90°F room temperature range.
If the resistance reading is out of the range stated here, the sensor is detective and must be replaced.

NOTE 1: When measuring resistance disconnect the 4-pin connector(CN3) from the DPC otherwise a false reading may be indicated.
2: If checking an oven sensor thermistor just after the microwave oven has been operating, the sensor of course won't be room temperature. In this case the sensor must be removed and allowed to cool down to the 50°F to 90°F range.

MEASUREMENTS AND ADJUSTMENTS

WARNING

* For continued protection against radiation hazard, replace only with identical replacement parts (For NN models Part No. ANE61424L0AG, Type No. V-16G-3C26 for Primary latch switch Part No. A61424650AP, Type No. L-3C2-MR for Secondary latch switch and Part No. ANE6178-5R0, Type No. L-2C2-MR for short switch.
For MQ models Part No. ANE61424L0AG, Type No. V-16G-3C26 for Primary latch switch and Secondary latch switch and Part No. ANE61784L0AG, Type No. V-16G-2C25 for short switch.)
* When the 15 Amp. fuse is blown due to the operation of short switch, you must replace Primary latch switch and short switch. For U.S.A. models, also replace power relay B (Part No. AEG5J1EG12, Type No. G5J-1-TP) when the continuity check reads shorted contacts (1—2). Then follow the adjustment procedures below.
* Interlock switch replacement — In replacing faulty switches, be sure mounting tabs are not bent, broken or otherwise deficient in their ability to hold the switches.
* Refer to schematic diagram to ensure proper connection.

1. Adjustment of Primary latch switch, Secondary latch switch and short switch

(A) When mounting Primary latch switch, Secondary latch switch and short switch to door hook assembly, mount the Primary latch switch, the Secondary latch switch and the short switch to the door hook assembly as shown in table.

NOTE: **No specific adjustment during installation of Primary latch switch, Secondary latch switch and short switch to the door hook is necessary.**

(B) When mounting the door hook assembly to the oven assembly, adjust the door hook assembly by moving it in the direction of arrow in table so that the oven door will not have any play in it. Check for play in the door by pulling the door assembly. Make sure that the latch keys move smoothly after adjustment is completed. Completely tighten the screws holding the door hook assembly to the oven assembly.

(C) Reconnect the short switch and check the continuity of the monitor circuit and all latch switches again by following the components test procedures.

2. Measurement of microwave output

The power output of the magnetron can be determined by performing a simple water heating test as described below.

Necessary Equipment:

*1 liter beaker *Glass thermometer

*Wrist watch or stopwatch

NOTE: **Check the line voltage under load. Low voltage will lower the magnetron output. Take the temperature readings and heating time as accurate as possible.**

(A) Fill the beaker with exactly one liter of tap water. Stir the water using the thermometer and record the beaker's temperature (recorded as T1).

(B) Place the beaker on the center of glass cook plate.
Set the oven for High power and heat it for exactly one minute.

(C) Stir the water again and read the temperature of the beaker (recorded as T2).

(D) The normal temperature rise at High power position for each models is as shown in table.

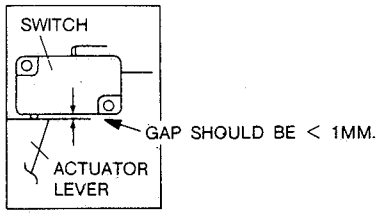

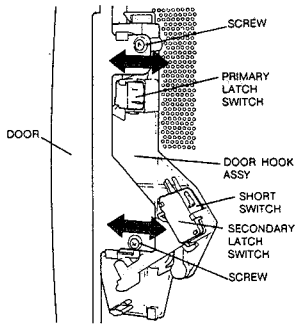

(NN models)

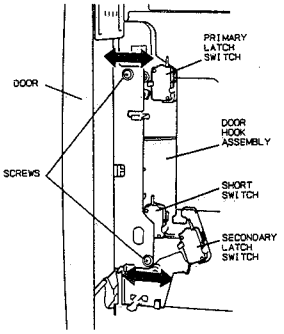

(MQ models)

02-014

Please confirm that the gap between the switch housing and switch actuator levers is no more than 1.0mm when the door is closed.

TABLE (1 ℓ -1min. test)

RATED OUTPUT	TEMPERATURE RISE
700W	Min. 13.5°F (7.5°C)

PROCEDURE FOR MEASURING MICROWAVE ENERGY LEAKAGE

WARNING

Check for radiation leakage after every servicing. Should the leakage be more than 2 mW/cm² (1mW/cm² for Canada) inform the MSC, PSC, or MELCA immediately. After repairing or replacing any radiation safety device, keep a written record for future reference, as required by D.H.H.S and NHW regulation. This required must be strictly observed. In addition, the leakage reading must be recorded on the service repair ticket while in the customer's home.

NOTE: The U.S. government standard is 5 mW/cm² while in the customer's home. 2mW/cm² stated here is our own voluntary standard. (1mW/cm² for Canada)

1. Equipment

*Electromagnetic radiation monitor
*Glass thermometer 212°F or 100°C
*600cc glass beaker

2. Procedure for measuring radiation leakage.

Note before measuring

(1) Do not exceed meter full scale deflection. Leakage monitor should initially be set to the highest scale.
(2) To prevent false readings the test probe should be held by the grip portion of the handle only and moved along the shaded area shown in ***Figure*** *no faster than 1 inch/sec (2.5 cm/sec)*
(3) Leakage with the outer panel removed·····less than 5mW/cm²
(4) Leakage for a fully assembled oven with door normally closed····· less than 2mW/cm² (1mW/cm² for Canada)
(5) Leakage for a fully assembled oven [Before the latch switch (primary) is interrupted] while pulling the door ·····less than 2mW/cm²

(A) Pour 275 ± 15cc (9ozs ± 1/2oz) of 20 ±5°C (68 ± 9°F) water in a beaker which is graduated to 600cc, and place the beaker in the center of the oven.
(B) Set the radiation monitor to 2450MHz and use it following the manufacturer's recommended test procedure to assure correct results.
(C) When measuring the leakage, always use the 2 inch (5cm) spacer supplied with the probe.
(D) Tap the start pad with the magnetron oscillating, measure the leakage by holding the probe perpendicular to the surface being measured.

(1) Measurement with the outer panel removed.

Whenever you replace the magnetron, measure for radiation leakage before the outer panel is installed and after all necessary components are replaced or adjusted. Special care should be taken in measuring around the magnetron.

WARNING

Avoid contacting any high voltage parts.

(2) Measurements with a fully assembled oven.

After all components, including the outer panel are fully assembled, measure for radiation leakage around the door periphery, the door viewing window, the exhaust opening and air inlet openings.

3. Record keeping and notification after measurement

(A) After any adjustment or repair to a microwave oven, a leakage reading must be taken. Record this leakage reading on the repair ticket even if it is zero.
A copy of this repair ticket and the microwave leakage reading should be kept by repair facility.

(B) Should the radiation leakage be more than 2 mW/cm² (1mW/cm² for Canada) after determining that all parts are in good condition, functioning properly, and genuine replacement parts as listed in this manual have been used, immediately notify the MSC, PSC or MELCA.

4. At least once a year, have the radiation monitor checked for calibration by its manufacturer.

WARNING

AVOID CONTACTING ANY HIGH VOLTAGE PARTS.

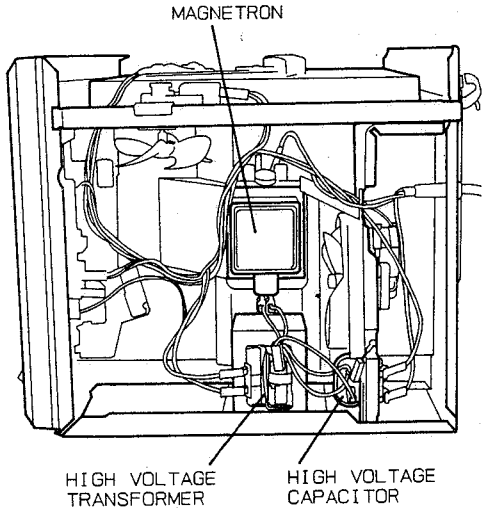

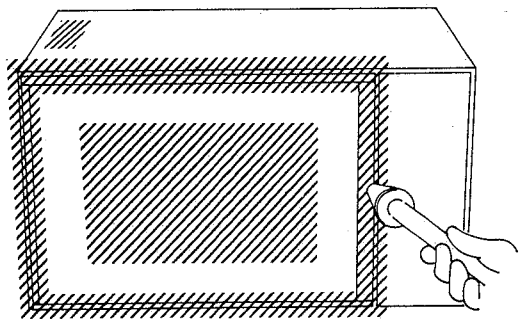

MOVE PROBE ALONG SHADED AREA (////) AROUND EXHAUST OPENINGS (as shown) AND AROUND AIR INLET OPENING

TROUBLESHOOTING GUIDE

CAUTION

1. Check grounding before checking for trouble.
2. Be careful of the high voltage circuit.
3. Discharge high voltage capacitor.
4. When checking the continuity of the switches or the high voltage transformer, disconnect one lead wire from these parts and then check continuity with the AC plug removed. To do otherwise may result in a false reading or damage to your meter.
   When disconnecting a plastic connector from a terminal, you must hold the plastic connector instead of the lead wire and then disconnect it, otherwise lead wire may be open or the connector cannot by removed.
5. Do not touch any parts of the circuitry on the digital programmer circuit, since static electric discharge may damage this control panel.
   Always touch yourself to ground while working on this panel to discharge any static charge in your body.
6. A 120V AC is present at the shaded area ▩ of the digital programmer circuit (Terminals of power relay B and primary circuit of low voltage transformer). When troubleshooting, be cautious of possible electrical shock hazard.

First of all operate the microwave oven following the correct operating procedures in order to find the exact cause of any trouble.

[TROUBLE 1] Oven does not start cooking

SYMPTOM	STEP	CHECK	RESULT	CAUSE/CORRECTIONS
Oven is dead. No display at all	1	Fuse	Blown	→ TROUBLE 2
			Normal	→ STEP 2
	2	Thermal cutout	Faulty (open)	Thermal cutout ※ Check fan motor when thermal cutout is defective
			Normal	→ TROUBLE 4
Display lit but timer not starts count down	1	Secondary latch switch (Door closed 0 Ω (Door opened ∞ Ω)	Faulty	Secondary latch switch
			Normal	→ TROUBLE 4
Timer starts count down but no microwave oscillation	1	Primary latch switch (Door closed 0 Ω (Door opened ∞ Ω)	Faulty	Primary latch switch
			Normal	→ STEP 2
	2	High voltage transformer primary voltage	No voltage applied	→ STEP 3
			Power supply voltage applied	→ STEP 4
	3	Is 18 (12)V DC applied to power relay B?	No voltage applied	→ TROUBLE 4
			Voltage applied	Power relay B
	4	Check high voltage component according to component test procedure H.V.Transformer H.V.Capacitor H.V.Diode Magnetron	Faulty	Replace faulty H.V.Component

[TROUBLE 2] Fuse is blown

SYMPTOM	STEP	CHECK	RESULT	CAUSE/CORRECTIONS
Main fuse blown	1	Primary latch switch (Door closed 0 Ω (Door opened ∞ Ω) and also power relay B (RY 2), when power relay B is located within monitor circuit.	Abnormal	Primary latch switch (※NOTE)
			Normal	→ STEP 2
	2	Short switch (Door closed 0 Ω (Door opened ∞ Ω)	Abnormal	Short switch (※NOTE)
			Normal	→ STEP 3
	3	H.V.Capacitor	Faulty	H.V.Capacitor
			Normal	→ STEP 4
	4	H.V.Diode	Faulty	H.V.Diode
			Normal	→ STEP 5
	5	Magnetron	Faulty	Magnetron
			Normal	H. V. Transformer
	※NOTE: All these switches must be replaced at same time. (Refer to adjustment instructions.) Check continuity of power relay B's contacts (between 1 and 2) and if it has continuity, replace power relay B too.			

[TROUBLE 3] Other troubles

CONDITIONS	POSSIBLE CAUSE	NOTE
Microwave output power is low. First of all, check if output power is really low by following "Measurement of microwave output".	1. Decrease in power source voltage. 2. Aging change of magnetron.	
Oven lamp and fan motor turn on when door is open.	1. Shorted contacts of Primary latch switch.	For U.S.A. models only.
Oven lamp and fan motor turn on when power supply cord is plugged into wall receptacle.	1. Open Secondary latch switch. 2. Shorted contacts of power relay A. (RY2) 3. Defective digital programmer circuit. (See trouble 4)	
Microwave oven does not operate normally, when auto sensor cooking is selected.	1. Defective humidity sensor. 2. Defective DPC. (See trouble 4)	
"88:88" appears in display window after 30 seconds elapsed in the auto sensor cooking mode.	1. Open or loose wiring of sensor terminals from DPC. 2. Open humidity sensor. 3. Defective DPC. (See trouble 4)	
"88:88" appears in display window after 1 minute elapsed in the all cooking mode.	1. Defective oven temp sensor. 2. Defective DPC.	
Heater does not heat at all.	1. Defective heater. 2. Defective power replay C (RY3). 3. Defective DPC.	

[TROUBLE 4] Trouble related to Digital programmer circuit

SYMPTOM	STEP	CHECK	RESULT	CAUSE/CORRECTIONS
No display when oven is first plugged in	1	Low voltage transformer (L.V.T.) secondary voltage	Abnormal (0V)	L.V.T.
			Normal	→ STEP 2
	2	IC-1 pin 64 voltage (Emitter of Q1)	Abnormal	ZD1,Q1
			Normal (5V)	→ STEP 3
	3	IC-1 pin 27 voltage (14 pin of IC-2)	Abnormal	IC-2
			Normal (Approx. 5V)	IC-1, CX1, DISPLAY
No key input	1	Membrane switch continuity	Abnormal	Membrane switch
			Normal	IC-1
No beep sound	1	IC-1 pin 23 voltage	Abnormal	IC-1
			Normal	→ STEP 2
	2	IC-3 pin 13 voltage	Abnormal	IC-3
			Normal	BZ
Heater does not turn on	1	IC-1 pin 19 voltage (at operation)	Abnormal	IC-1
			Normal	→ STEP 2
	2	IC-3 pin 12 voltage (at operation)	Abnormal	IC-3
			Normal	→ STEP 3
	3	Q5 transistor	Abnormal	Q5
			Normal	IC-2, RY-4
No microwave oscillation at any power setting	1	IC-1 pin 20 and 21 voltages (at High power operation)	Abnormal	IC-1
			Normal	→ STEP 2
	2	Q6 transistor	Abnormal	Q6
			Normal	IC-2, RY-2
Dark or unclear display	1	Replace DISP and check operation	Abnormal	IC-1
			Normal	DISP
Missing or lighting of unnecessary segment	1	Replace IC-1 and check operation	Abnormal	DISP
			Normal	IC-1
Oven stops it's operation 30 seconds after the start pad is tapped. Humidity sensor heater stay red glows for 30 sec.	1	Short circuit across the sensor terminals and check the operation	Oven operates continuously until cancel pad is tapped. Heater shut off by itself	Humidity sensor
			Still oven stops operation at 30 seconds.	C6, Q3, IC-1
Humidity sensor heater does not heat up at all	1	Heater terminals voltage	Normal AC 5-10V	Humidity sensor heater open
			No voltage	→ STEP 2
	2	LVT voltage between S1 and S2	No voltage	LVT
			Normal AC 10~20V	D20 triac,IC-1, Q2

EXPLODED VIEW AND PARTS LIST

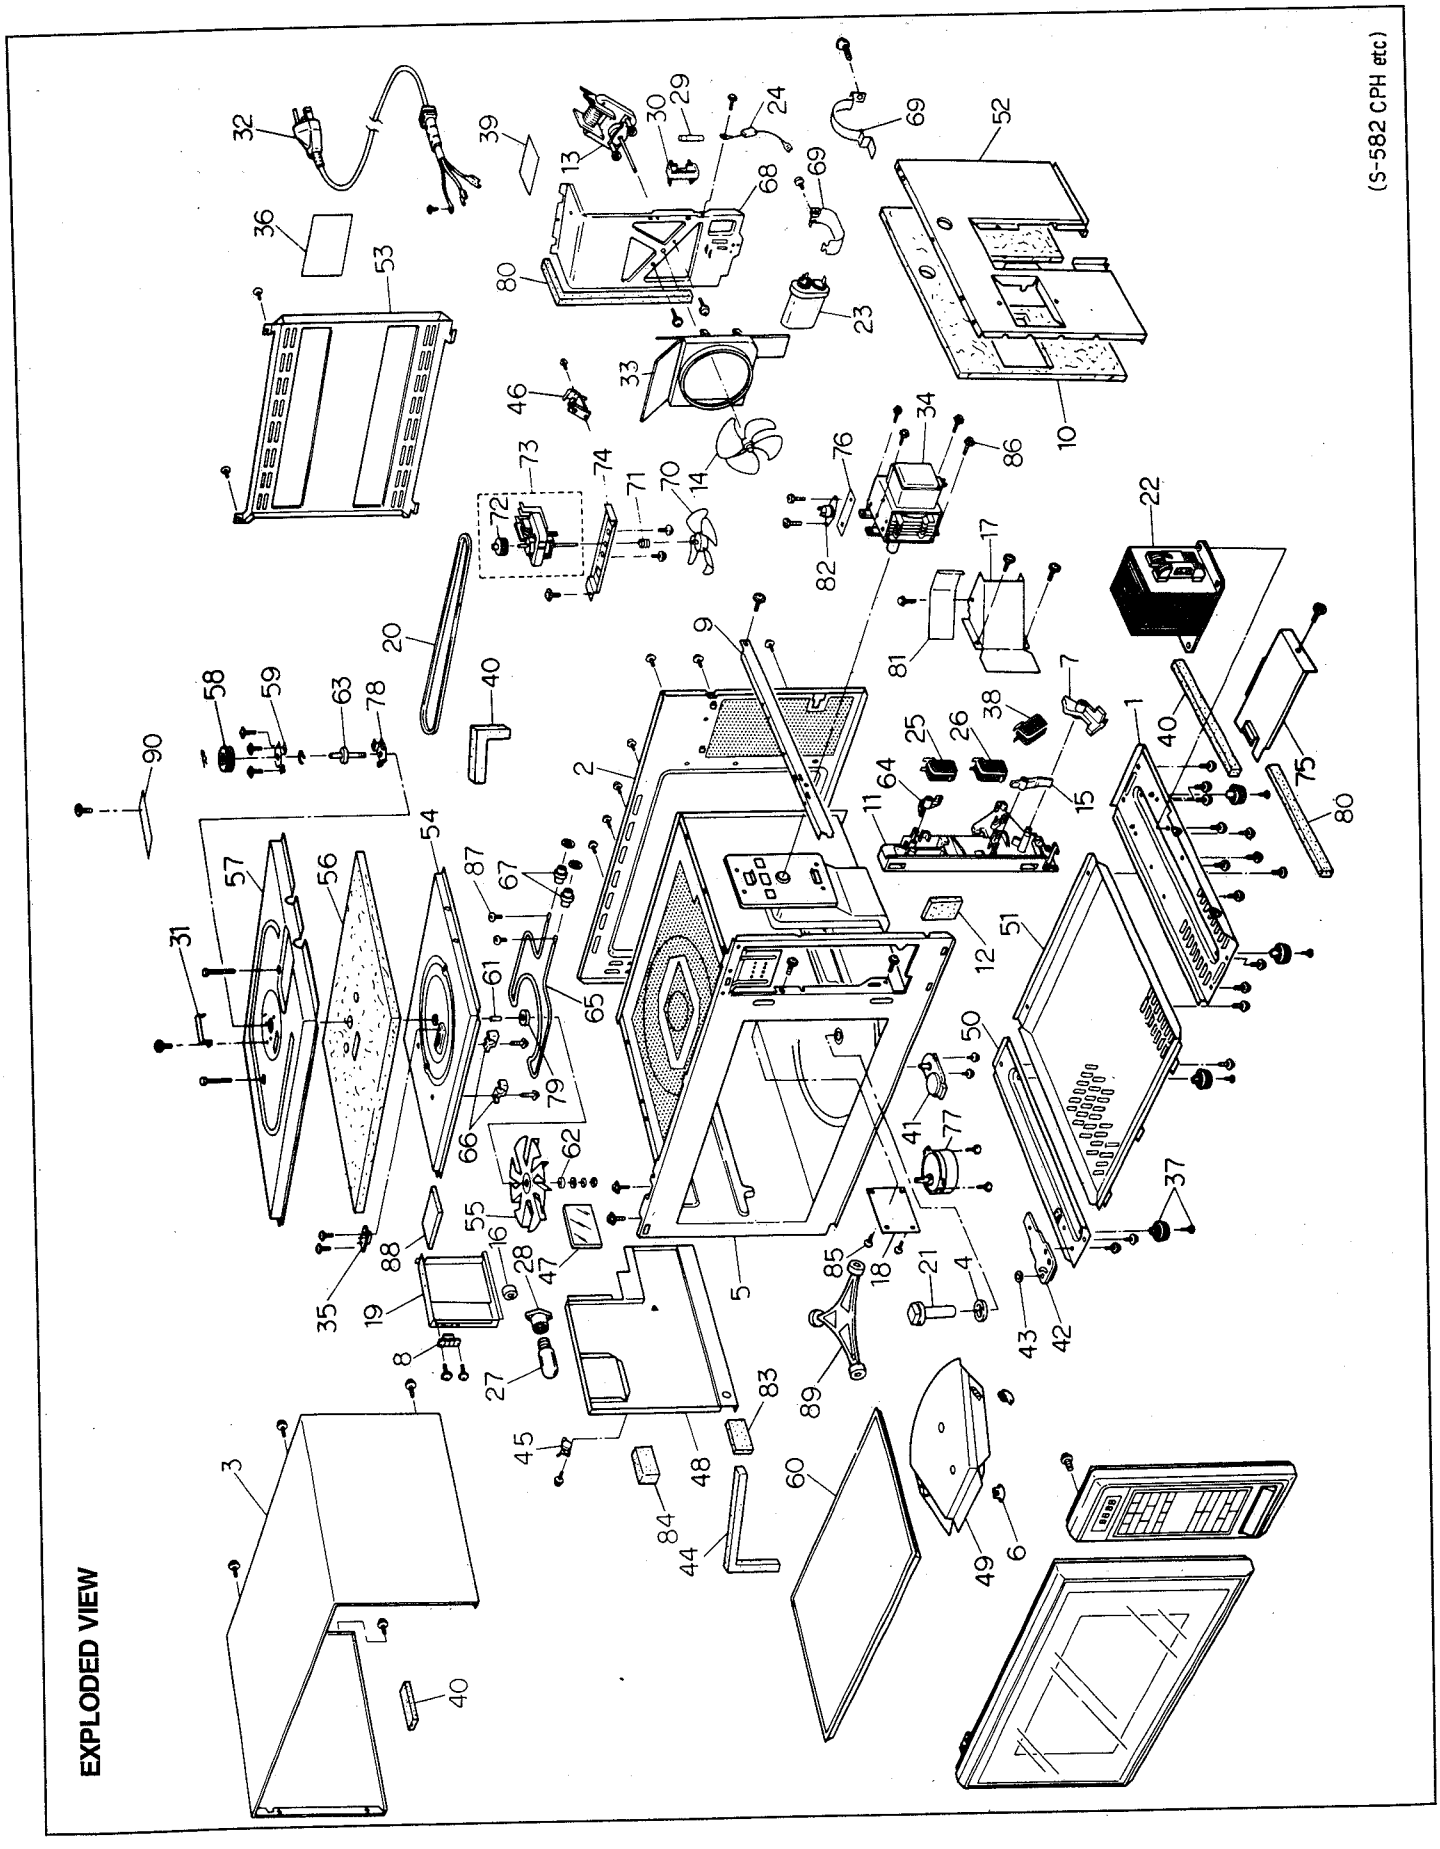

DOOR ASSEMBLY

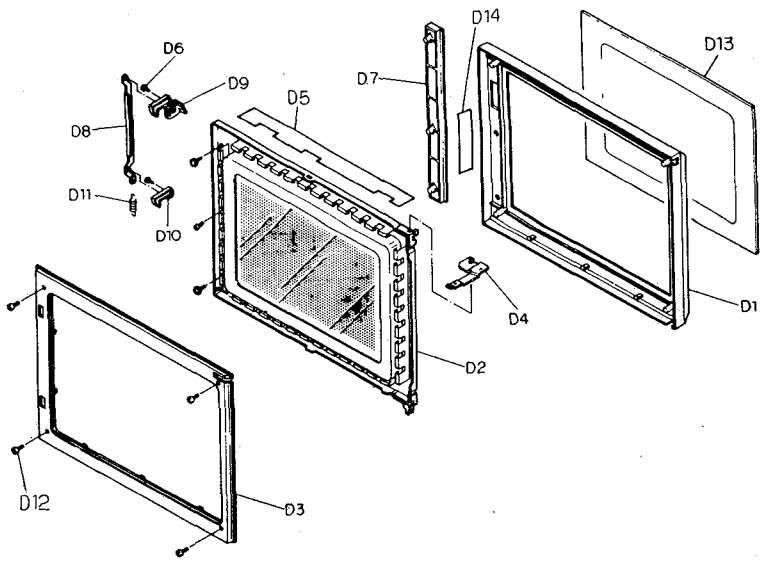

(S-582 CPH etc)

ESCUTCHEON BASE ASSEMBLY

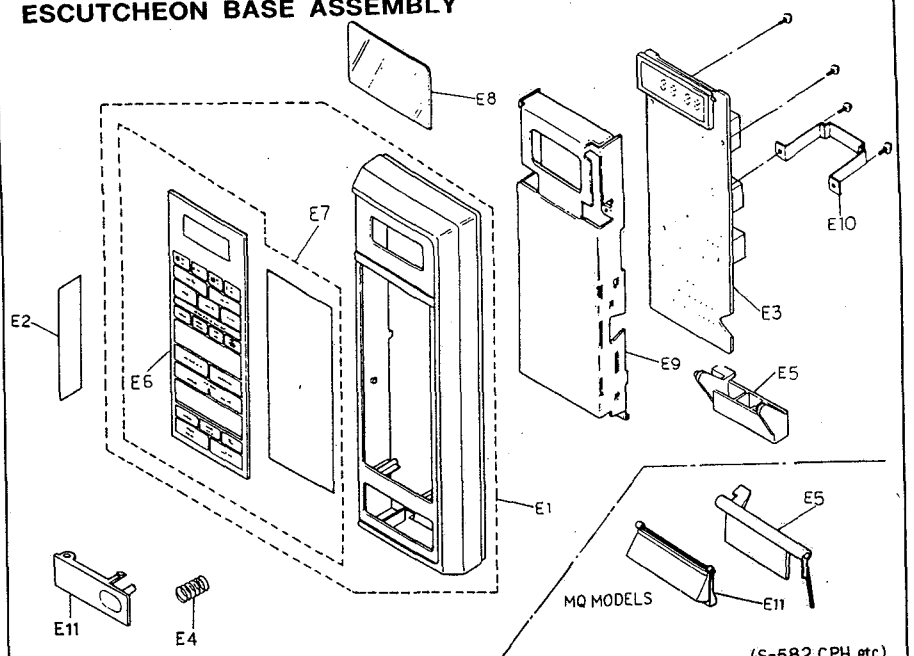

(S-582 CPH etc)

PACKING AND ACCESSORIES

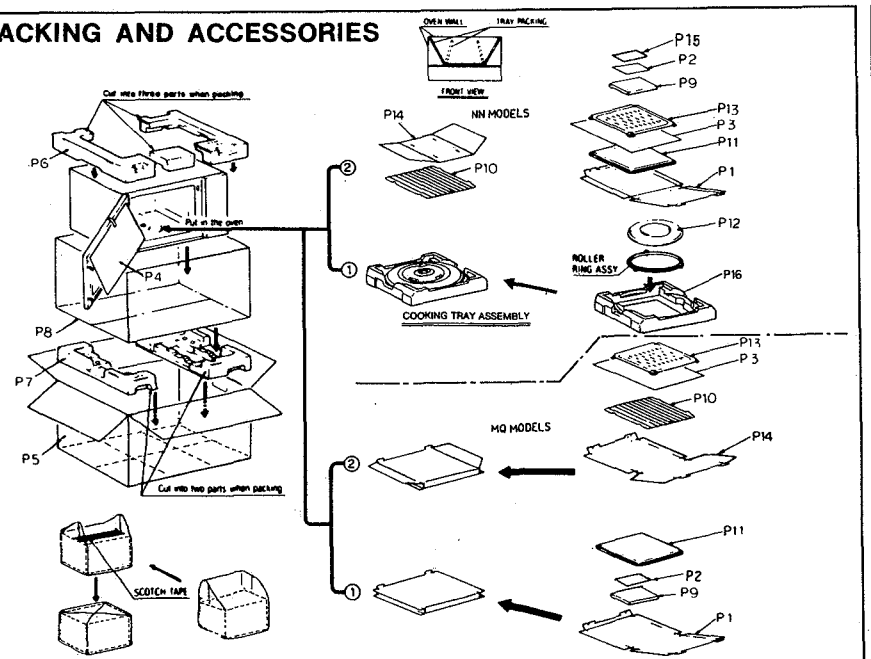

(S-582 CPH etc)

WIRING MATERIAL

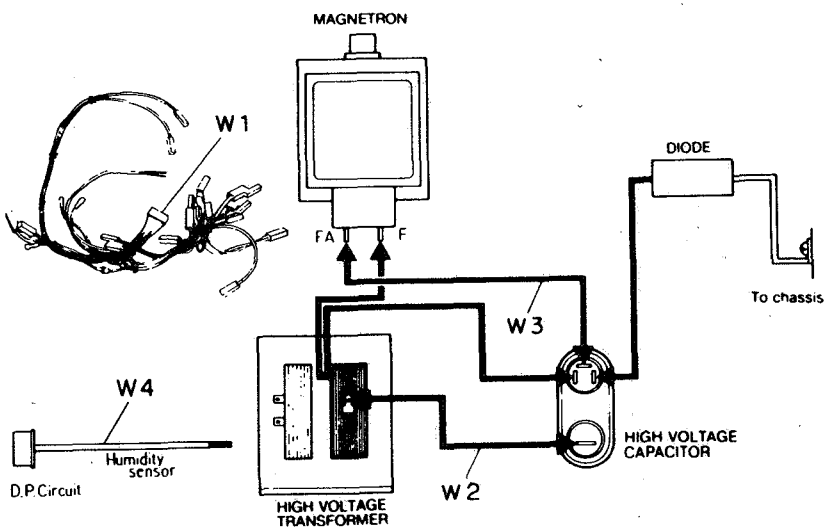

(S-582 CPH etc)

PARTS LIST

NOTE 1: When ordering replacement part(s), please use part number(s) shown in this parts list. Do not use description of the part.

2: Important safety notice:
Components identified by ⚠ mark have special characteristics important for safety.
When replacing any of these components, use only manufacturer's specified parts.

3: Alphabet marks in Remarks columns (i.e. APH, AQH, etc) indicate parts applicable to only specified country models as follows

APH: For U.S.A. and some of Latin America countries, CPH: For Canada

AQH: For U.S.A., CQH: For Canada

Parts without these marks can be used for all models.

Ref. No.		Part No.	Part Name & Description	Pcs/ Set	Remarks
1		A10015450AP	Base	1	NN-9800, NN-9850, NN-9500
1		A10014250AP	Base	1	MQC1408W, MQC1408H, MQC1403W
2		A10045450AP	Back panel	1	NN-9800, NN-9850, NN-9500
2		A10044250AP	Back panel	1	MQC1408W, MQC1408H, MQC1403W
3		A10095450AP	Cabinet body	1	NN-9800, NN-9500
3		A10095460HAP	Cabinet body	1	NN-9850
3		A10094250AP	Cabinet body assy	1	MQC1408W, MQC1403W
3		A10095820HAQ	Cabinet body assy	1	MQC1408H
4		ANE2177-F80	Washer	1	NN-9800, NN-9850, NN-9500
5	⚠	A200A5450AP	Oven	1	NN-9800, NN-9850, NN-9500
5	⚠	A200A5450AQ	Oven	1	MQC1408W, MQC1408H, MQC1403W
6		A20194210AQ	Stirrer stopper	2	MQC1408W, MQC1408H, MQC1403W
7		A31374650AP	Hook spacer B	1	NN-9800, NN-9850, NN-9500
7		ANE31372Q0AP	Hook spacer B	1	MQC1408W, MQC1408H, MQC1403W
8		A601L4780AP	Humidity sensor	1	NN-9800, NN-9850, MQC1408W, MQC1408H
9		A20365450AP	Reinforce bracket B	1	NN-9800, NN-9850, NN-9500
9		A20344250AP	Reinforce bracket A	1	MQC1408W, MQC1408H, MQC1403W
10		A22434250AP	Adiabatic material B	1	MQC1408W, MQC1408H, MQC1403W
11	⚠	A30204310AG	Door hook A	1	NN-9800, NN-9850, NN-9500
11	⚠	ANE30207J0AP	Door hook A	1	MQC1408W, MQC1408H, MQC1403W
12		ANE0901000CD	Cushion rubber A	1	MQC1408W, MQC1408H, MQC1403W
13		A400A4010AP	Fan motor	1	NN-9800, NN-9850, NN-9500 AC, 24W, Single
13		A400A4210AP	Fan motor	1	MQC1408W, MQC1408H, MQC1403W AC, 24W, Single
14		ANE40086W0AP	Fan	1	
15		A31384650AP	Hook spacer C	1	NN-9800, NN-9850, NN-9500
15		ANE31382Q0AP	Hook spacer C	1	MQC1408W, MQC1408H, MQC1403W
16		A60755450AP	Spacer	1	NN-9800, NN-9850, NN-9500
17		A40255450AP	Air guide A	1	NN-9800, NN-9850, NN-9500
17		A40254250AP	Air guide A	1	MQC1408W, MQC1408H, MQC1403W
18		A20555450AP	Cover A	1	NN-9800, NN-9850, NN-9500
19		A400K5040AQ	Exhaust guide	1	NN-9800, NN-9850
19		A400K5020AQ	Exhaust guide	1	NN-9500
19		A400K4260AP	Exhaust guide	1	MQC1408W, MQC1408H
19		A400K4250AP	Exhaust guide	1	MQC1403W
20		A41555450AP	Belt C	1	NN-9800, NN-9850, NN-9500 (Si)
20		A41554250AP	Belt C	1	MQC1408W, MQC1408H, MQC1403W (Si)
21		A21315450AP	Pulley shaft	1	NN-9800, NN-9850, NN-9500
22	⚠	A600B5180AP	H.V.Transformer	1	NN-9800, NN-9850, NN-9500 (1.4KVA)
22	⚠	A600B4210AP	H.V.Transformer	1	MQC1408W, MQC1408H, MQC1403W (1.4KVA)
23	⚠	A60904650AP	H.V.Capacitor	1	NN-9800, NN-9850, NN-9500 (0.951μF, AC2000V)
23	⚠	A60904010AP	H.V.Capacitor	1	MQC1408W, MQC1408H, MQC1403W (0.935μF, AC2000V)
24	⚠	A62024000AP	Diode	1	(Si, 0.35mA)
25,26	⚠	ANE61424L0AG	Micro switch	2	Primary/Secondary latch switch (V-16G-3C26) MQC1408W, MQC1408H, MQC1403W
25	⚠	ANE61424L0AG	Micro switch	1	Primary latch switch (V-16G-3C26) NN-9800, NN-9850, NN-9500
26	⚠	A61424650AP	Micro switch	1	Secondary latch switch NN-9800, NN-9850, NN-9500 (L-3C2-MR)
27		ANE6030540AP	Incandescent lamp	1	(125V, 20W)
28		A61524210AA	Oven lamp socket	1	
29	⚠	ANE6230B00AP	Fuse	1	(125V, 15A)
30		A62314000AP	Fuse holder	1	
31		A12074250AP	Reinforce bracket	1	MQC1408W, MQC1408H, MQC1403W
32		A900C5020AP	AC cord W/plug	1	NN-9850 APH, NN-9500 (120V)
32		A900C5020CQ	AC cord W/plug	1	NN-9800, NN-9850 CPH (120V)
32		A900C4250AP	AC cord W/plug	1	MQC1408W, MQC1403W (120V)
32		A900C5820HAQ	AC cord W/plug	1	MQC1408H AQH (120V)
32		A900C4250CP	AC cord W/plug	1	MQC1408H CQH (120V)
33		A41445020AP	Orifice	1	NN-9800, NN-9850, NN-9500
33		A41444250AP	Orifice	1	MQC1408W, MQC1408H, MQC1403W
34	⚠	2M210-M1C	Magnetron	1	
35		A605Y5450QP	Oven temp sensor	1	NN-9800, NN-9850, NN-9500
35		A605Y4210AQ	Oven temp sensor	1	MQC1408W, MQC1408H, MQC1403W
36		A00064650AP	Warning label	1	NN-9850 APH, NN-9500, MQC1408W, MQC1408H AQH, MQC1403W
36		ANE0006R30CP	Warning label	1	NN-9800,NN-9850CPH, MQC1408H CQH
37		ANE1008-3W0	Rubber foot	4	
38	⚠	ANE6178-5R0	Micro switch	1	NN-9800, NN-9850, NN-9500 Short switch (L-2C2-MR)
38	⚠	ANE61784L0AG	Micro switch	1	MQC1408W, MQC1408H, MQC1403W Short switch (V-16G-2C25)
39		A00335020AP	Fuse label	1	NN-9800, NN-9850, NN-9500
39		A00335450AQ	Fuse label	1	MQC1408W, MQC1408H AQH, MQC1403W
39		A00334210AP	Fuse label	1	MQC1408H CQH
40		ANE000Z000AA	Cushion rubberA	3	MQC1408W, MQC1408H, MQC1403W
41		A61444000AQ	Antenna motor	1	MQC1408W, MQC1408H, MQC1403W (AC, 2.5W, Single)
42	⚠	A30075450AP	Lower hinge	1	NN-9800, NN-9850, NN-9500
42	⚠	A301L4210AP	Lower hinge	1	MQC1408W, MQC1408H, MQC1403W
43		ANE3081B60AP	Door hinge spacer	1	MQC1408W, MQC1408H, MQC1403W
44		ANE0929000AJ	Cushion rubber C	1	MQC1408W, MQC1408H, MQC1403W
45		A61454210AP	Thermal cutout	1	

(S-582 APH/AQH)

Ref. No.		Part No.	Part Name & Description	Pcs/ Set	Remarks
46		ANE11408A0AG	Stopper A	1	
47		A64374250AP	Glass plate	1	MQC1408W, MQC1408H, MQC1403W (For Oven lamp)
48		A22374250AP	Left heater panel	1	MQC1408W, MQC1408H, MQC1403W
49		A202K4250AQ	Antenna	1	MQC1408W, MQC1408H, MQC1403W (Moving antenna)
50		A11295450AP	Base B	1	NN-9800, NN-9850, NN-9500
50		A11294250AP	Base B	1	MQC1408W, MQC1408H, MQC1403W
51		A10265450AP	Base C	1	NN-9800, NN-9850, NN-9500
51		A10264250AP	Base C	1	MQC1408W, MQC1408H, MQC1403W
52		A22365450AP	Right heater panel	1	NN-9800, NN-9850, NN-9500
52		A22364250AQ	Right heater panel	1	MQC1408W, MQC1408H, MQC1403W
53		A10585450AP	Back panel cover A	1	NN-9800, NN-9850, NN-9500
53		A10584250AP	Back panel cover A	1	MQC1408W, MQC1408H, MQC1403W
54		A21445450AP	Upper panel B	1	NN-9800, NN-9850, NN-9500
54		A203L4250AP	Upper panel B	1	MQC1408W, MQC1408H, MQC1403W
55		ANE22392L0AP	Circulation fan	1	NN-9800, NN-9850, NN-9500
55		A22394250AP	Circulation fan	1	MQC1408W, MQC1408H, MQC1403W
56		A22425450AP	Adiabatic material A	1	NN-9800, NN-9850, NN-9500
56		A22424250AP	Adiabatic material A	1	MQC1408W, MQC1408H, MQC1403W
57		A22785450AP	Upper heater panel	1	NN-9800, NN-9850, NN-9500
57		A22784250AP	Upper heater panel	1	MQC1408W, MQC1408H, MQC1403W
58		A41325020AQ	Pulley B	1	NN-9800, NN-9850, NN-9500
58		ANE41322L0AP	Pulley B	1	MQC1408W, MQC1408H, MQC1403W
59		A41575450AP	Fan bracket A	1	NN-9800, NN-9850, NN-9500
59		A41574250AP	Fan bracket A	1	MQC1408W, MQC1408H, MQC1403W
60		A010T4250AQ	Shelf	1	MQC1408W, MQC1408H, MQC1403W
61		A41614210AQ	Spacer A	1	MQC1408W, MQC1408H, MQC1403W
62		ANE41622L0AP	Spacer B	1	MQC1408W, MQC1408H, MQC1403W
63		A41645450AP	Shaft assy	1	NN-9800, NN-9850, NN-9500
63		A41644210AQ	Shaft assy	1	MQC1408W, MQC1408H, MQC1403W
64		ANE31362Q0AP	Hook spacer A	1	MQC1408W, MQC1408H, MQC1403W
65		ANE630G2L0CP	Heater A	1	NN-9800, NN-9850, NN-9500
65		A630G4210AQ	Heater A	1	MQC1408W, MQC1408H, MQC1403W
66		A64175130AP	Heater support	2	NN-9800, NN-9850, NN-9500
66		A64174210AQ	Heater support	2	MQC1408W, MQC1408H, MQC1403W
67		ANE6501K90AP	Holder C	2	
68		A41124250AP	Fan motor bracket B	1	MQC1408W, MQC1408H, MQC1403W
69		A61884060AP	Capacitor bracket	1	NN-9800, NN-9850, NN-9500
69		ANE6037X00AP	Capacitor bracket	1	MQC1408W, MQC1408H, MQC1403W
70		A40085020AQ	Fan	1	NN-9800, NN-9850, NN-9500
70		ANE40082L0AP	Fan	1	MQC1408W, MQC1408H, MQC1403W
71		ANE4057-F50	Spring	1	MQC1408W, MQC1408H, MQC1403W
72		ANE41312L0AP	Pulley A	1	MQC1408W, MQC1408H, MQC1403W
73		A41795450AP	Heater fan motor assy	1	NN-9800, NN-9850, NN-9500
73		A41794210AQ	Heater fan motor assy	1	MQC1408W, MQC1408H, MQC1403W
74		A41805450AP	Bracket	1	NN-9800, NN-9850, NN-9500
74		A41804250AP	Bracket	1	MQC1408W, MQC1408H, MQC1403W
75		A11264210CP	Base metal	1	MQC1408H CQH
76		A62384310AG	Spacer	1	MQC1408W, MQC1408H, MQC1403W
77		A63265450AP	Turntable motor	1	NN-9800, NN-9850, NN-9500
78		A41585450AP	Fan bracket B	1	NN-9800, NN-9850, NN-9500
78		A41584210AQ	Fan bracket B	1	MQC1408W, MQC1408H, MQC1403W
79		A41635020AQ	Spacer C	1	NN-9800, NN-9850, NN-9500
79		A41634250AP	Spacer C	1	MQC1408W, MQC1408H, MQC1403W
80		ANE000Z000AB	Cushion rubber C	3	NN-9800, NN-9850, NN-9500
81		A40264250AP	Air guide B	1	MQC1408W, MQC1408H, MQC1403W
82		A61454000AP	Thermal cutout	1	MQC1408W, MQC1408H, MQC1403W
83		ANE0902000DB	Cushion rubber A	1	MQC1408W, MQC1408H, MQC1403W
84		ANE0924000DE	Cushion rubber C	1	MQC1408W, MQC1408H, MQC1403W
85		XST4+5VS	Screw 4×5	1	(Cover)
86		XTWANE4+10RU	Tapping screw 4×10	4	(For Magnetron)
87		XYT4+C8VS	Screw 4×8	2	(Heater)
88		A41034210AQ	Air guide cushion B	1	MQC1408W, MQC1408H, MQC1403W
89		A200P5460AP	Metal turntable	1	NN-9800, NN-9850, NN-9500
90		A62435450AP	Spacer	1	NN-9800, NN-9850, NN-9500

DOOR ASSEMBLY

D1	⚠	A302A5450AP	Door A assy	1	NN-9800, NN-9500 (NOTE 4)
D1	⚠	A302A5460HAP	Door A assy	1	NN-9850 (NOTE 4)
D1	⚠	A30014250AQ	Door A assy	1	MQC1408W, MQC1403W (NOTE 4)
D1	⚠	A30015820HAQ	Door A assy	1	MQC1408H (NOTE 4)
D2	⚠	A302K5450AP	Door E assy	1	NN-9800, NN-9850, NN-9500
D2	⚠	A302K4250AP	Door E assy	1	MQC1408W, MQC1408H, MQC1403W
D3	⚠	A30855450AP	Door C	1	NN-9800, NN-9500
D3	⚠	A30855460HAP	Door C	1	NN-9850
D3	⚠	A30854250AP	Door C	1	MQC1408W, MQC1403W
D3	⚠	A30855820HAQ	Door C	1	MQC1408H
D4	⚠	A300B5450AP	Upper hinge	1	NN-9800, NN-9850, NN-9500
D4	⚠	A300B4210AP	Upper hinge	1	MQC1408W, MQC1408H, MQC1403W
D5		A30884250AP	Ferrite rubber	1	MQC1408W, MQC1408H, MQC1403W
D6		ANE30567J0AP	Door key pin	2	MQC1408W, MQC1408H, MQC1403W
D7		A30124250AQ	Door handle	1	MQC1408W, MQC1403W
D7		A30125820HAQ	Door handle	1	MQC1408H
D8		A301H4210AP	Door key lever B	1	MQC1408W, MQC1408H, MQC1403W
D9		A30184650AP	Door key A	1	NN-9800, NN-9850, NN-9500
D9		ANE30182Q0AP	Door key A	1	MQC1408W, MQC1408H, MQC1403W
D10		ANE30192Q0AP	Door key B	1	MQC1408W, MQC1408H, MQC1403W
D11		A30214000AP	Door key spring	1	NN-9800, NN-9850, NN-9500
D11		ANE3021X00AP	Door key spring	1	MQC1408W, MQC1408H, MQC1403W
D12		XTBANE4+12FK	Tapping screw 4×12	4	NN-9800, NN-9500 MQC1408W, MQC1408H, MQC1403W

(S-582 APH/AQH)

Ref. No.		Part No.	Part Name & Description	Pcs/ Set	Remarks
D12		XTBANE4+12FC	Tapping screw 4X12	4	NN-9850
D13		A31465450AQ	Door screen B assy	1	MQC1408W, MQC1403W
D13		A31465820HAQ	Door screen B assy	1	MQC1408H
D14		ANE0245X00AP	DHHS label	1	NN-9850 APH,NN-9500, MQC1408W, MQC1408H AQH, MQC1403W
D14		A04115020CQ	CSA caution label		NN-9800, NN-9850 CPH, MQC1408H CQH
ESCUTCHEON BASE ASSEMBLY					
E1		A800L5820AP	Escutcheon base assy	1	NN-9800 (NOTE 5) (With Membrane switch assy)
E1		A800L5820HAP	Escutcheon base assy	1	NN-9850 (NOTE 5) (With Membrane switch assy)
E1		A800L5830AP	Escutcheon base assy	1	NN-9500 (NOTE 5) (With Membrane switch assy)
E1		A80345820AQ	Escutcheon base	1	MQC1408W, MQC1403W (NOTE 5)
E1		A80345820HAQ	Escutcheon base	1	MQC1408H (NOTE 5)
E2		A01575820HAP	Name plate	1	NN-9850 APH
E2		A01575830AP	Name plate	1	NN-9500
E2		A01575820AQ	Name plate	1	MQC1408W
E2		A01575820HAQ	Name plate	1	MQC1408H AQH
E2		A01575830AQ	Name plate	1	MQC1403W
E3		A603L5820AP	D.P.Circuit assy	1	NN-9800, NN-9850 (W/Component)
E3		A603L5830AP	D.P.Circuit assy	1	NN-9500(W/Component)
E3		A603L5820AQ	D.P.Circuit assy	1	MQC1408W, MQC1408H (W/Component)
E3		A603L5830AQ	D.P.Circuit assy	1	MQC1403W (W/Component)
E4		ANE80378A0AG	Spring	1	NN-9800, NN-9850, NN-9500
E5		A82565110BP	Door opening lever	1	NN-9800, NN-9850, NN-9500
E5		A82564210AP	Door opening lever	1	MQC1408W, MQC1408H, MQC1403W
E6		A83375820AP	Escutcheon sheet	1	NN-9800
E6		A83375820HAP	Escutcheon sheet	1	NN-9850
E6		A83375830AP	Escutcheon sheet	1	NN-9500
E7		A630Y5820AP	Membrane switch assy	1	NN-9800 (With Escutcheon sheet)
E7		A630Y5820HAP	Membrane switch assy	1	NN-9850 (With Escutcheon sheet)
E7		A630Y5830AP	Membrane switchassy	1	NN-9500 (With Escutcheon sheet)
E7		A64795820AQ	Membrane switch	1	MQC1408W
E7		A64795820HAQ	Membrane switch	1	MQC1408H
E7		A64795830AQ	Membrane switch	1	MQC1403W
E8		A81264250AQ	Smoke panel	1	MQC1408W, MQC1403W
E8		A81265820HAQ	Smoke panel	1	MQC1408H
E9		A81275450AP	Bracket	1	NN-9800, NN-9850, NN-9500
E9		A81274210AQ	Bracket	1	MQC1408W, MQC1408H, MQC1403W
E10		ANE6551R20AP	L.V.T.Support bracket	1	MQC1408W, MQC1408H
E10		A65514210AQ	L.V.T.Support bracket	1	MQC1403W
E11		A80725110BP	Door opening button	1	NN-9800, NN-9500
E11		A80725090HAQ	Door opening button	1	NN-9850
E11		A80724210AP	Door opening button	1	MQC1408W, MQC1403W
E11		A80724230HAP	Door opening button	1	MQC1408H
PACKING AND ACCESSORIES					
P1		A01175460CP	Packing B	1	NN-9800,NN-9850
P1		A01174250AQ	Packing B	1	MQC1408H CQH
P2		A00035820CP	Instruction book	1	NN-9800, NN-9850 CPH
P2		A00035820AP	Instruction book	1	NN-9850 APH,NN-9500
P2		A00035820AQ	Instruction book	1	MQC1408W, MQC1408H AQH, MQC1403W
P2		A00035820CQ	Instruction book	1	MQC1408H CQH
P3		ANE02072L0AP	Styrol sheet	1	NN-9800, NN-9850, MQC1408H CQH
P4		ANE0107580AP	Door sheet	1	
P5		A01025820CP	Packing case, paper	1	NN-9800

Ref. No.		Part No.	Part Name & Description	Pcs/ Set	Remarks
P5		A01025820HAP	Packing case, paper	1	NN-9850 APH
P5		A01025820HCP	Packing case, paper	1	NN-9850 CPH
P5		A01025830AP	Packing case, paper	1	NN-9500
P5		A01025820AQ	Packing case, paper	1	MQC1408W
P5		A01025820HAQ	Packing case, paper	1	MQC1408H AQH
P5		A01025820HCQ	Packing case, paper	1	MQC1408H CQH
P5		A01025830AQ	Packing case, paper	1	MQC1403W
P6		A01045450AP	Upper filler	1	NN-9800, NN-9850, NN-9500
P6		A01044250AP	Upper filler	1	MQC1408W, MQC1408H, MQC1403W
P7		A01055450AP	Lower filler	1	NN-9800, NN-9850, NN-9500
P7		A01054250AP	Lower filler	1	MQC1408W, MQC1408H, MQC1403W
P8		A01065130AP	Vinyl cover	1	
P9		A000B5820CP	Cook book	1	NN-9800, NN-9850 CPH
P9		A000B5820AP	Cook book	1	NN-9850 APH,NN-9500
P9		A000B5820AQ	Cook book	1	MQC1408W, MQC1408H AQH, MQC1403W
P9		A000B5820CQ	Cook book	1	MQC1408H CQH
P10		A06025450AP	Oven rack	1	NN-9800, NN-9850, NN-9500
P10		A06025450AQ	Oven rack	1	MQC1408W, MQC1408H, MQC1403W
P11		A06034250AP	Broiler pan	1	NN-9800,NN-9850, MQC1408H CQH
P12		A06015450AP	Metal tray	1	NN-9800, NN-9850, NN-9500
P13		A06484250AP	Spatter shield	1	NN-9800,NN-9850, MQC1408H CQH
P14		A01085460CP	Tray packing	1	NN-9800, NN-9850
P14		A01085450AP	Tray packing	1	NN-9500
P14		A01084250AG	Tray packing	1	MQC1408W, MQC1408H AQH, MQC1403W
P14		A01084250AQ	Tray packing	1	MQC1408H CQH
P15		ANE0169B60CP	Servicenter list	1	NN-9800, NN-9850 CPH
P16		A01135450AP	Tray styrol	1	NN-9800, NN-9850, NN-9500
WIRING MATERIAL					
W1		A030A5820AP	Lead wire harness	1	NN-9850 APH, NN-9500
W1		A030A5820CP	Lead wire harness	1	NN-9800, NN-9850 CPH
W1		A030A5450AQ	Lead wire harness	1	MQC1408W, MQC1408H AQH, MQC1403W
W1		A030A5460CQ	Lead wire harness	1	MQC1408H CQH
W2		A03504000AP	Lead wire	1	
W3		A03514000AP	Lead wire	1	NN-9800, NN-9850, NN-9500 (NOTE 6)
W3		A03504210AP	Lead wire	1	MQC1408W, MQC1408H, MQC1403W (NOTE 6)
W4		A03535040AP	Lead wire	1	NN-9800, NN-9850, MQC1408W, MQC1408H

NOTE 4:Please order DHHS label or CSA caution label together.
5:Please order name platetogether.
6: When this lead wire is open, replace together with magnetron.

DIGITAL PROGRAMMER CIRCUIT

PARTS LIST

Ref. No.	Part No.	Description	Pcs/ Set	Remarks
DISP	A64565820AP	Fluorescent tube	1	
SPACER	A82845540AP	Spacer cushion	1	For DISP
T1	A62495040AP	L.V.Transformer	1	(12VA) NN-9850/9800
T1	A62495020AQ	L.V.Transformer	1	(4.5VA)NN-9500
T1	A62495460AQ	L.V.Transformer	1	MQC1408
T1	A62494210AQ	L.V.Transformer	1	(5.1VA)MQC1403
CN1	AEEMMA15509W	9 pin connector	1	
CN2,3	AEEMMC00F04W	4 pin connector	2	
CN4	AEEM11FDZBTM	11 pin connector	1	NN-9850/9800/9500
CN4	AEEMWD1012	12 pin connector	1	MQC1408/ MQC1403
CN5	AEEMMA07507W	7 pin connector	1	NN-9850/9800, MQC1408
BZ	AEFB22EP2002	Buzzer	1	2kHz
CX1	AEFFT4R19GWT	Ceramic resonator	1	4.19MHz
RY1	AEAWJZDC18A	Power relay	1	(18V)
RY2,4	AEG5J1EG12B	Power relay	2	(12V)
RY5	AEBVG-18P-0	Power relay	1	(18V)
ZNR1	ERZC10DK471F	ZNR	1	
IC1	AEIC50940304	L.S.I. (MOS Microprocessor IC)	1	NN-9850/9800/9500
IC1	AEIC50940294	L.S.I. (MOS Microprocessor IC)	1	MQC1408, MQC1403
IC2	AN6752	I.C. (Bipolar Linear IC)	1	
IC3	AEICBA12004	I.C.	1	
Q1	2SD2006-R	Transistor, Si 250mW	1	(120MHz)
Q2	UN4211	Transistor, Si 300mW	1	NN-9850/9800, MQC1408
Q3	2SC1685-R	Transistor, Si 400mW	1	(150MHz) NN-9850/9800, MQC1408
Q5	UN4123	Transistor, Si 300mW	1	
Q6	2SC1318-R	Transistor, Si 400mW	1	(200MHz)
D1,2	AEDNERA1502	Diode, Si	2	(0.1A)
D3,6,7,8,9	MA196	Diode, Si	5	(0.1A) NN-9500, MQC1403
D3,5,6,7,8,9	MA196	Diode, Si	6	(0.1A)NN-9850/9800, MQC1408
ZD1	AEDZ5R6ES2T1	Zener diode, Si	1	
ZD2	AEDZ4R7ES3T1	Zener diode, Si	1	
ZD4	AEDZ4R3ES3T1	Zener diode, Si	1	NN-9850/9800, MQC1408
ZD5	AEDZ15ES3T1	Zener diode, Si	1	
C1	ECEA1VU102E	Electrolytic capacitor, Al	1	1000 μF, −10%+30%, 35V
C2	ECEA1VU221B	Electrolytic capacitor, Al	1	220μF, −10%+30%, 35V
C3	ECEA1CU220B	Electrolytic capacitor, Al	1	22μF, −10%+30%, 16V
C5	ECEA1HU010B	Electrolytic capacitor, Al	1	1.0μF, −10%+30%, 50V NN-9850/9800, MQC1408
C6	ECEA1HKAR47B	Electrolytic capacitor, Al	1	0.47μF, −10%+30%, 50V NN-9850/9800
C6	ECEA1HUR47B	Electrolytic capacitor, Al	1	0.47μF, −20%+80%, 50V MQC1408
C7	ECKR1H102ZF	Ceramic capacitor (Single layer)	1	0.1μF, −20%+80%,
C8	ECKR1H103ZF	Ceramic capacitor (Single layer)	1	0.01μF, −20%+80%, 50V NN-9850/9800/ 9500
C8,21	ECKR1H103ZF	Ceramic capacitor (Single layer)	2	0.01μF, −20%+80%, 50V MQC1408/ MQC1403
C9,10,11, 12,14	ECBT1E103ZF5	Ceramic capacitor (Single layer)	5	0.01μF, −20%+80%, 25V
C13	ECEA1HU4R7B	Electrolytic capacitor, Al	1	4.7μF, −10%+30%, 50V
C22	AECF055F104Z	Ceramic capacitor (Multi layer)	1	0.1μF, −20%+80% 50V MQC1408/ MQC1403
R1,2	ERDS2TJ201T	Carbon film resistor	2	200Ω, ±5%, 1/4W NN-9500/MQC1403
R1,2,12, 15	ERDS2TJ201T	Carbon film resistor	4	200Ω, ±5%, 1/4W NN-9850/9800/ MQC1408
R3,19,20, 24,41,43	ERDS2TJ103T	Carbon film resistor	6	10kΩ, ±5%, 1/4W NN-9850/9800/9500
R3,19,20, 24,41,42, 43	ERDS2TJ103T	Carbon film resistor	7	10kΩ, ±5%, 1/4W MQC1408/ MQC1408
R4,5,23, 28,29,30, 31	ERDS2TJ751T	Carbon film resistor	7	750Ω, ±5%, 1/4W NN-9500/MQC1403
R4,5,6,7, 23,28,29, 30,31	ERDS2TJ751T	Carbon film resistor	9	750Ω, ±5%, 1/4W NN-9850/9800/ MQC1408
R8,9,10,11 46	ERDS2TJ181T	Carbon film resistor	1	180Ω, ±5%, 1/4W NN-9850/9800/ MQC1408
R13,14,22, 27	ERDS2TJ512T	Carbon film resistor	4	5.1kΩ, ±5%, 1/4W NN-9850/9800/ MQC1408
R16,25	ERDS2TJ105T	Carbon film resistor	2	1MΩ, ±5%, 1/4W NN-9850/9800/ MQC1408
R17	EROS2TKF8662	Metal oxied resistor		86.6kΩ, ±1%, 1/4W NN-9850/9800/ MQC1408
R18	ERDS2TJ914T	Carbon film resistor	1	910kΩ, ±5%, 1/4W
R22,27	ERDS2TJ512T	Carbon film resistor	2	5.1kΩ, ±5%, 1/4W NN-9500/MQC1403
R25	ERDS2TJ105T	Carbon film resistor	1	1MΩ, ±5%, 1/4W NN-9500/MQC1403
R26	ERDS2TJ153T	Carbon film resistor	1	15kΩ, ±5%, 1/4W
R34,35	ERDS2TJ300T	Carbon film resistor	2	30Ω, ±5%, 1/4W
R38,39	ERDS2TJ390T	Carbon film resistor	2	39Ω, ±5%, 1/4W
R46	ERDS2TJ181T	Carbon film resistor	1	180Ω, ±5%, 1/4W NN-9500/MQC1403
R47	ERDS2TJ330T	Carbon film resistor	1	33Ω, ±5%, 1/4W
R48,51	ERDS2TJ1R1T	Carbon film resistor	2	1.1Ω, ±5%, 1/4W NN-9850/9800/9500
R48,51	ERDS2TJ1R0T	Carbon film resistor	2	1.0Ω, ±5%, 1/4W MQC1408/ MQC1403
Z1	AEXBM4X153JT	Compound resistor	1	15kΩX4, ±5%, 1/8W
D20	AESM03DGM-DY	Triac	1	NN-9850/9800
D20	AESMAC03DGMB	Triac	1	MQC1408

SERVICE FIXTURES AND TOOLS

EXTENSION CABLES

NOTE: To be used when repairing the DPC board assembly directly on the oven for easy access of the board.

Ref. No.	Part No.	Description	Pcs/ Set	Remarks
	AT40M004	4 pin extension cable	1	Cable No.16
	AT40M009	9 pin extension cable	1	Cable No.33
	AT40M007	7 pin extension cable	1	Cable No.37
	AT40E006	1 pinX6 extension cable	1	Cable No.9

DPC COMMON CHECKER AND ITS CABLE

NOTE: To be used only when DPC common checker is available.

Ref. No.	Part No.	Description	Pcs/ Set	Remarks
	ANE600ZK70AP	DPC common checker	1	
	AT30A5450AP	DPC checker cable	1	NOTE

DIGITAL PROGRAMMER CIRCUIT (NN-9500, MQC1403)

SCHEMATIC DIAGRAM

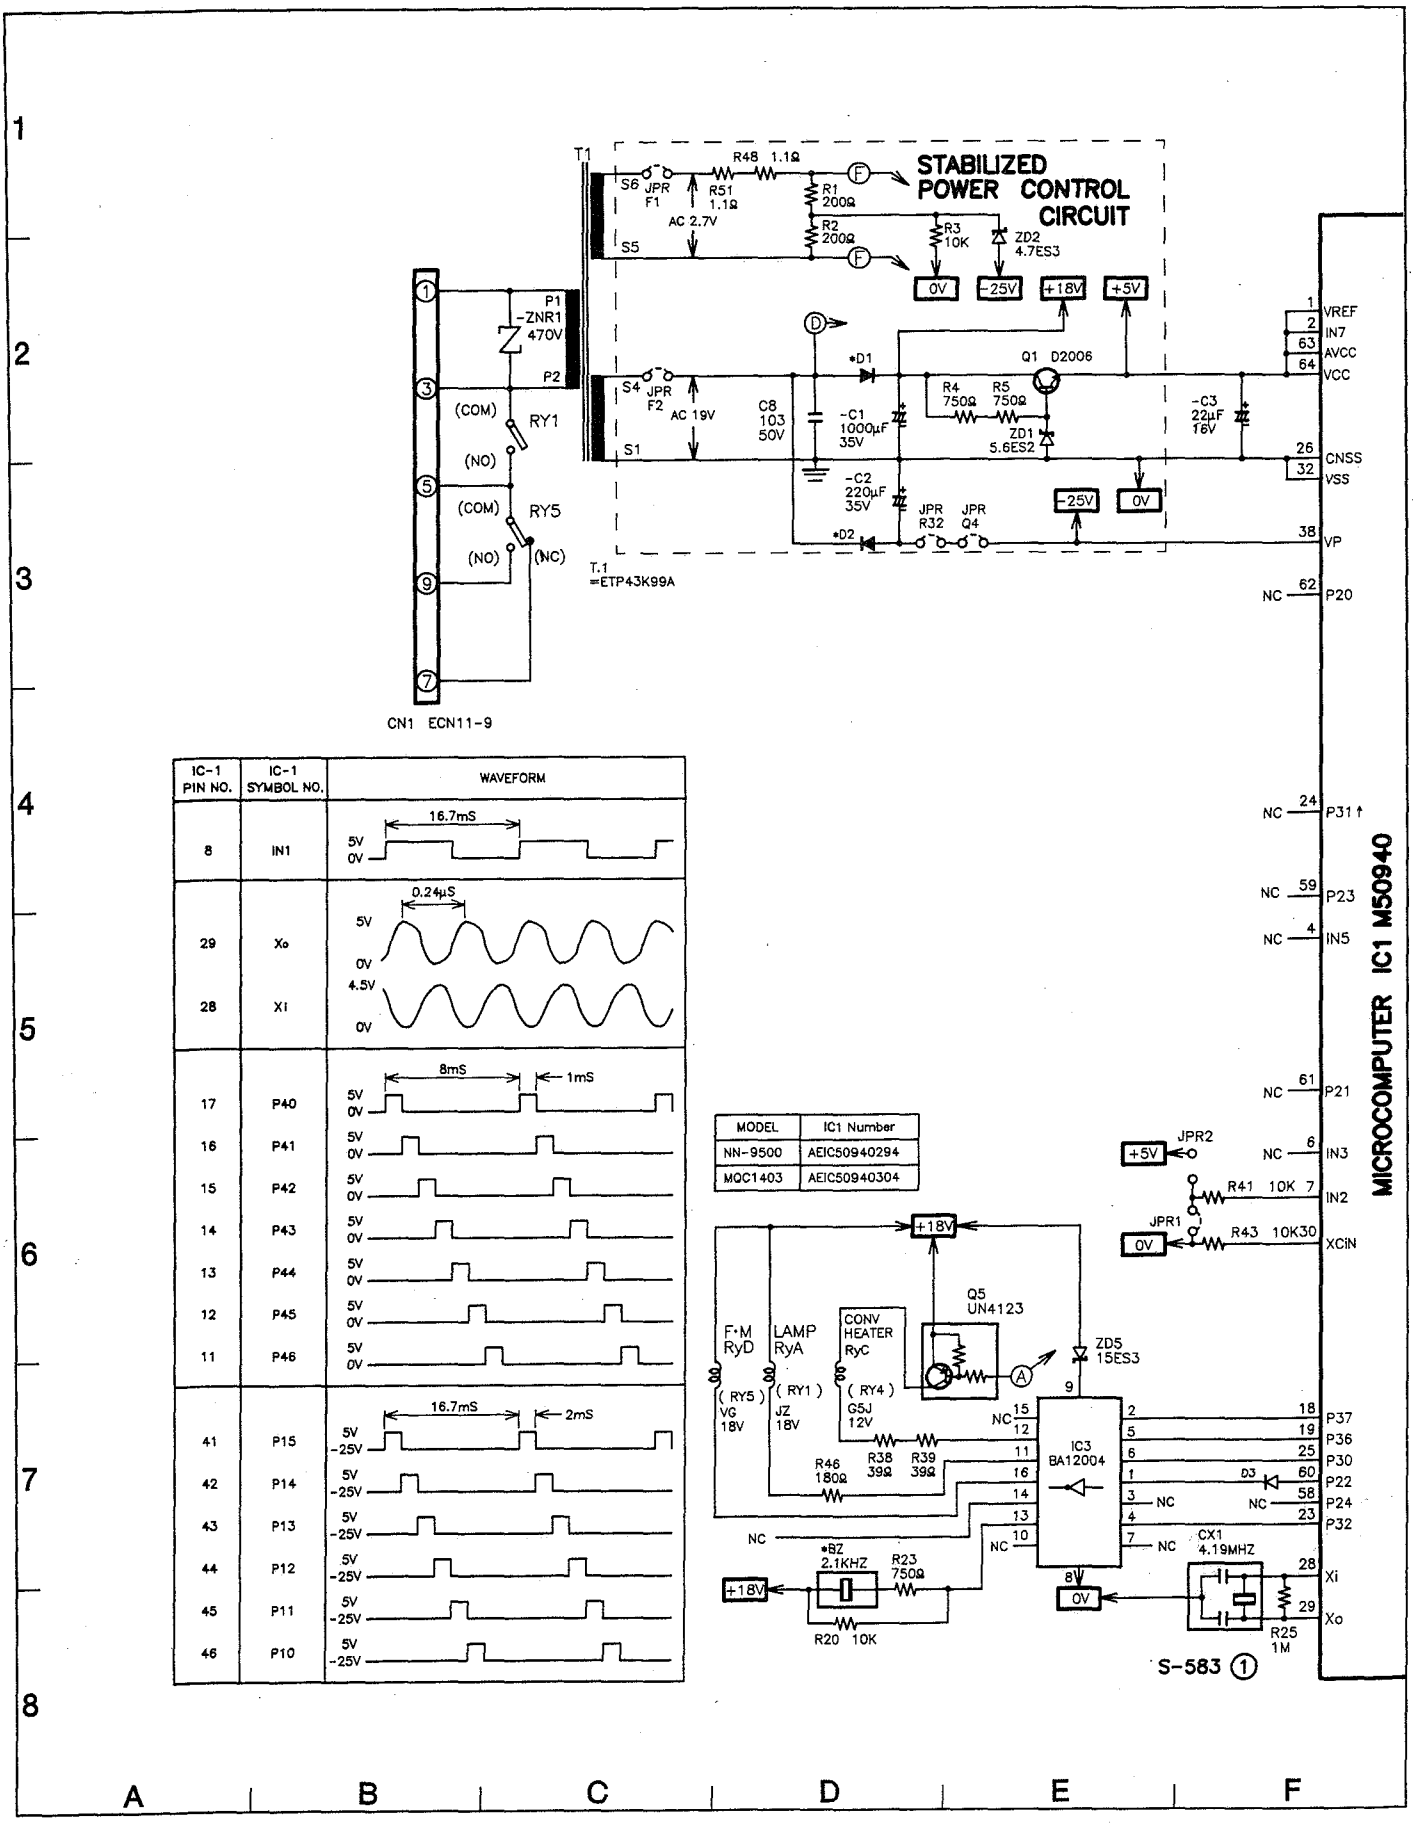

IC-1 PIN NO.	IC-1 SYMBOL NO.	WAVEFORM
8	IN1	16.7mS, 5V, 0V
29	Xo	0.24µS, 5V, 0V
28	XI	4.5V, 0V
17	P40	8mS, 1mS, 5V, 0V
16	P41	5V, 0V
15	P42	5V, 0V
14	P43	5V, 0V
13	P44	5V, 0V
12	P45	5V, 0V
11	P46	5V, 0V
41	P15	16.7mS, 2mS, 5V, -25V
42	P14	5V, -25V
43	P13	5V, -25V
44	P12	5V, -25V
45	P11	5V, -25V
46	P10	5V, -25V

MODEL	IC1 Number
NN-9500	AEIC50940294
MQC1403	AEIC50940304

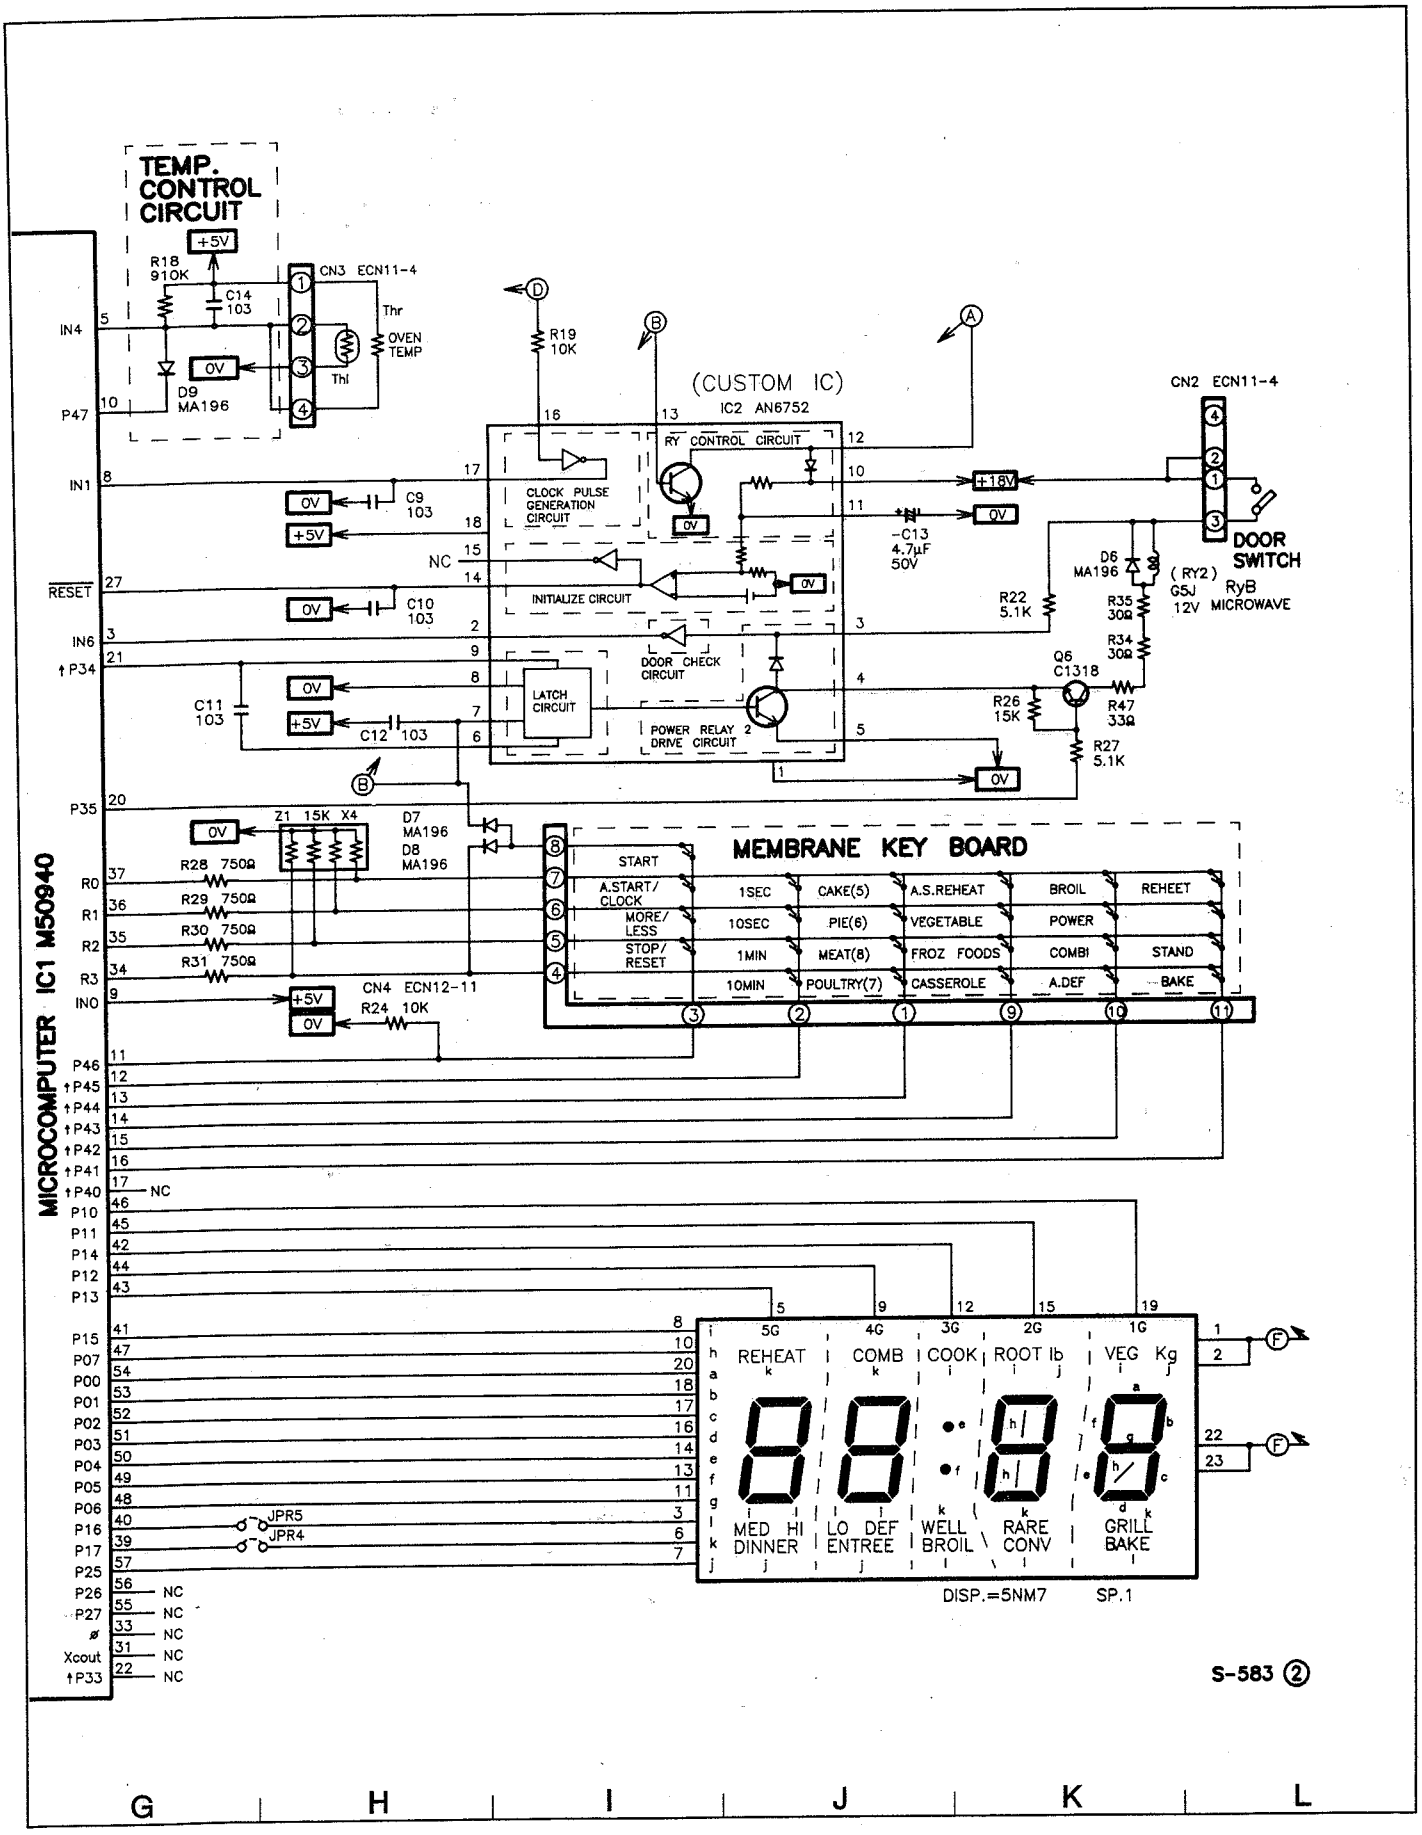
TEMP. CONTROL CIRCUIT
+5V
R18 910K
C14 103
CN3 ECN11-4
Thr
OVEN TEMP
Thl
0V
D9 MA196
IN4
P47
R19 10K
(CUSTOM IC)
IC2 AN6752
CN2 ECN11-4
DOOR SWITCH
RY CONTROL CIRCUIT
CLOCK PULSE GENERATION CIRCUIT
INITIALIZE CIRCUIT
DOOR CHECK CIRCUIT
LATCH CIRCUIT
POWER RELAY 2 DRIVE CIRCUIT
+18V
C9 103
C10 103
C11 103
C12 103
C13 4.7µF 50V
D6 MA196
(RY2) G5J 12V
RyB MICROWAVE
R22 5.1K
R35 30Ω
R34 30Ω
R47 33Ω
R26 15K
R27 5.1K
Q6 C1318
RESET
IN1
IN6
P34
P35
Z1 15K X4
D7 MA196
D8 MA196
R28 750Ω
R29 750Ω
R30 750Ω
R31 750Ω
R24 10K
CN4 ECN12-11
MEMBRANE KEY BOARD
START
A.START/ CLOCK
MORE/ LESS
STOP/ RESET
1SEC
10SEC
1MIN
10MIN
CAKE(5)
PIE(6)
MEAT(8)
POULTRY(7)
A.S.REHEAT
VEGETABLE
FROZ FOODS
CASSEROLE
BROIL
POWER
COMBI
A.DEF
REHEET
STAND
BAKE
MICROCOMPUTER IC1 M50940
R0
R1
R2
R3
INO
P46
P45
P44
P43
P42
P41
P40
P10
P11
P14
P12
P13
P15
P07
P00
P01
P02
P03
P04
P05
P06
P16
P17
P25
P26
P27
Xcout
P33
JPR5
JPR4
NC
5G
4G
3G
2G
1G
REHEAT
COMB
COOK
ROOT lb
VEG Kg
MED HI DINNER
LO DEF ENTREE
WELL BROIL
RARE CONV
GRILL BAKE
DISP.=5NM7
SP.1
S-583 ②

DIGITAL PROGRAMMER CIRCUIT (NN-9850, NN-9800, MQC1408)

SCHEMATIC DIAGRAM

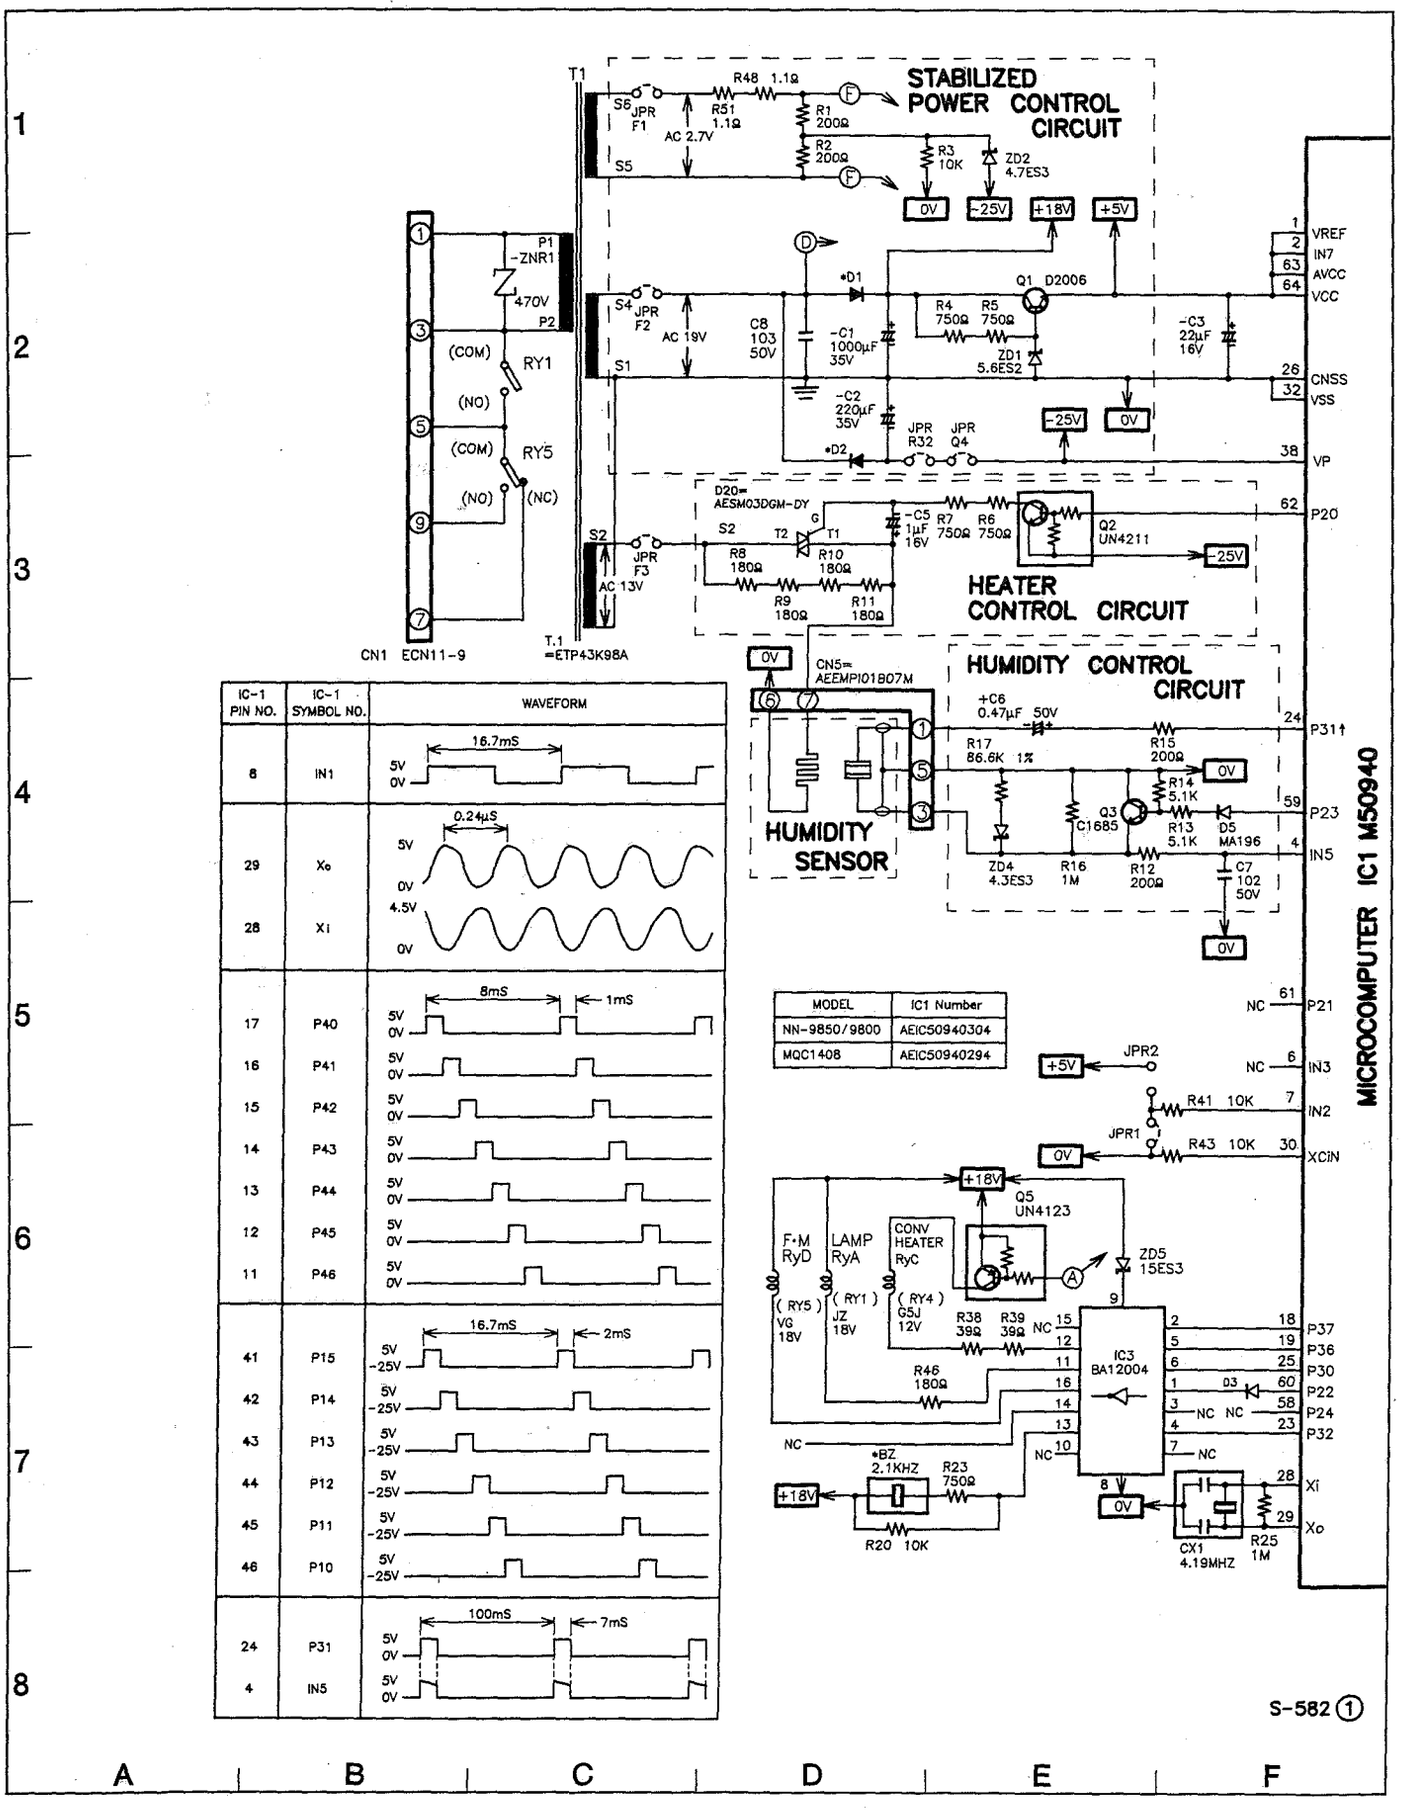

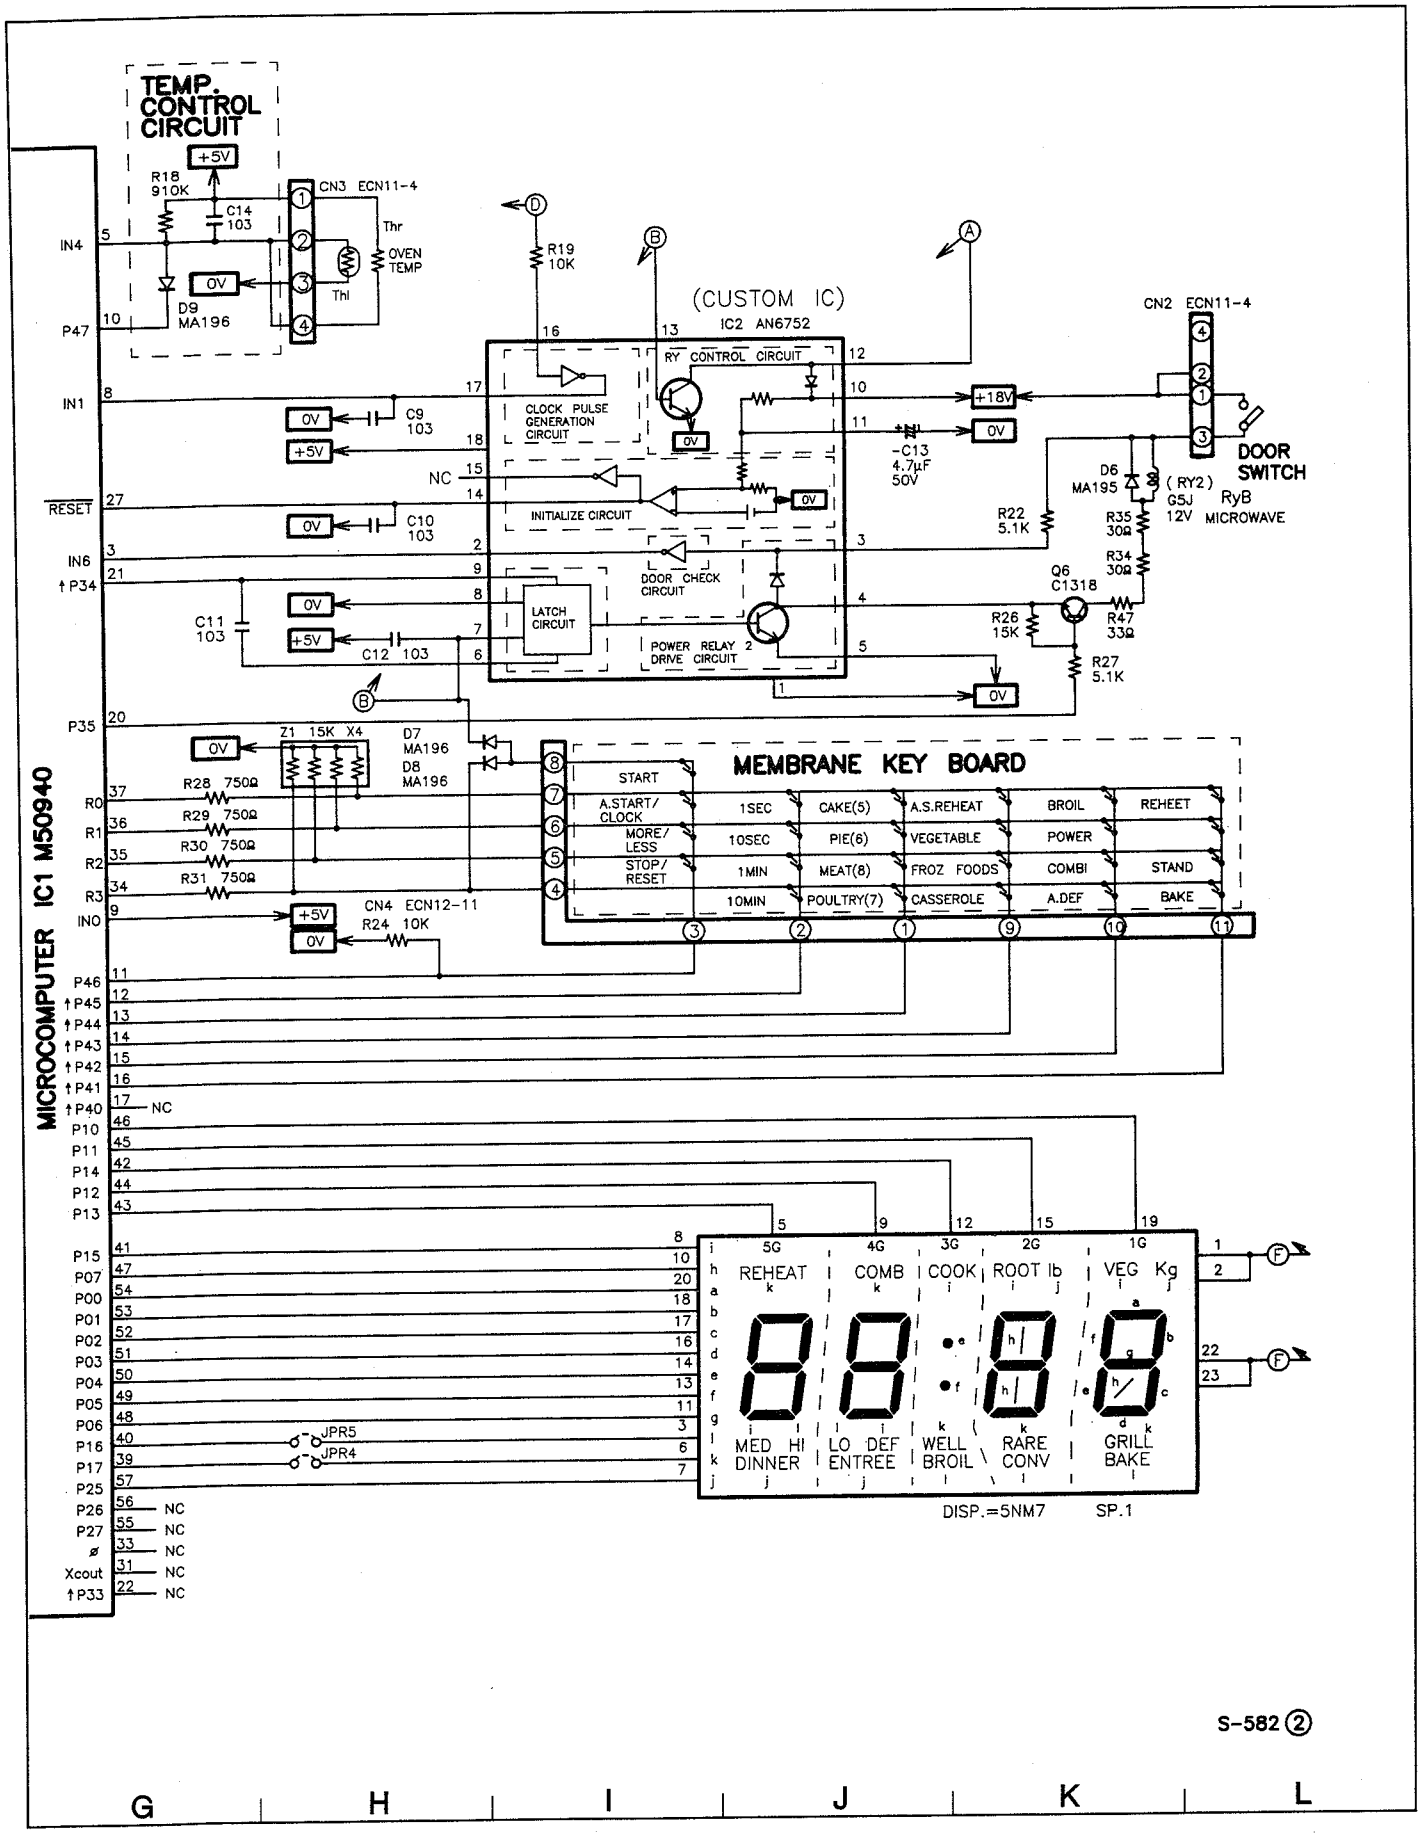
TEMP. CONTROL CIRCUIT
+5V
R18 910K
C14 103
CN3 ECN11-4
Thr
OVEN TEMP
Thl
0V
D9 MA196
IN4
P47
R19 10K
(CUSTOM IC)
IC2 AN6752
RY CONTROL CIRCUIT
CLOCK PULSE GENERATION CIRCUIT
INITIALIZE CIRCUIT
DOOR CHECK CIRCUIT
LATCH CIRCUIT
POWER RELAY 2 DRIVE CIRCUIT
C9 103
C10 103
C11 103
C12 103
NC
IN1
RESET
IN6
P34
P35
+18V
-C13 4.7µF 50V
CN2 ECN11-4
DOOR SWITCH
D6 MA195
(RY2) G5J 12V
RyB MICROWAVE
R22 5.1K
R35 30Ω
R34 30Ω
Q6 C1318
R26 15K
R47 33Ω
R27 5.1K
Z1 15K X4
D7 MA196
D8 MA196
R28 750Ω
R29 750Ω
R30 750Ω
R31 750Ω
CN4 ECN12-11
R24 10K
MEMBRANE KEY BOARD
START
A.START/ CLOCK
MORE/ LESS
STOP/ RESET
1SEC
10SEC
1MIN
10MIN
CAKE(5)
PIE(6)
MEAT(8)
POULTRY(7)
A.S.REHEAT
VEGETABLE
FROZ FOODS
CASSEROLE
BROIL
POWER
COMBI
A.DEF
REHEET
STAND
BAKE
MICROCOMPUTER IC1 M50940
R0
R1
R2
R3
INO
P46
P45
P44
P43
P42
P41
P40
P10
P11
P14
P12
P13
P15
P07
P00
P01
P02
P03
P04
P05
P06
P16
P17
P25
P26
P27
Xcout
P33
JPR5
JPR4
5G REHEAT
4G COMB
3G COOK
2G ROOT lb
1G VEG Kg
MED HI DINNER
LO DEF ENTREE
WELL BROIL
RARE CONV
GRILL BAKE
DISP.=5NM7
SP.1
S-582 ②

WP-410
S-582 APH/AQH
Printed in Japan
Ⓚo, Ⓘn & Ⓔ